

PAIRING BLUETOOTH IMMOBILISER (BTI) TO SMART PHONE



SECURITY SYSTEMS





GETTING STARTED

- ✓ Download BTI App from Apple or Google Play Store



Download on the
App Store




GET IT ON
Google Play





GETTING STARTED

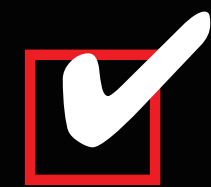

Ensure Bluetooth, Face, Finger Scan and Passcode are all turned on in Phone Settings. Background App. Refresh in Phone settings must also be on.



DISARM WITH CONSUMER REMOTE



Press and hold button for 3 to 5 seconds.
System will sound 2 beeps.



ACTIVATE BLUETOOTH MODE

- ✓ Turn ignition on.
- ✓ Press button on the TX101 5 times (you will hear one beep for each press). The 5th press will be a long beep.

- ✓ Press the button again 3 times, you will hear 2 short beeps followed by a long 3rd beep. After the long 3rd beep the system is now in Bluetooth Pairing mode for 3 minutes.



STEP 3

APPLE & ANDROID



Open the BTI APP






STEP 4

APPLE & ANDROID

- ☒ Press the top left icon (scan) and enter Scan page.

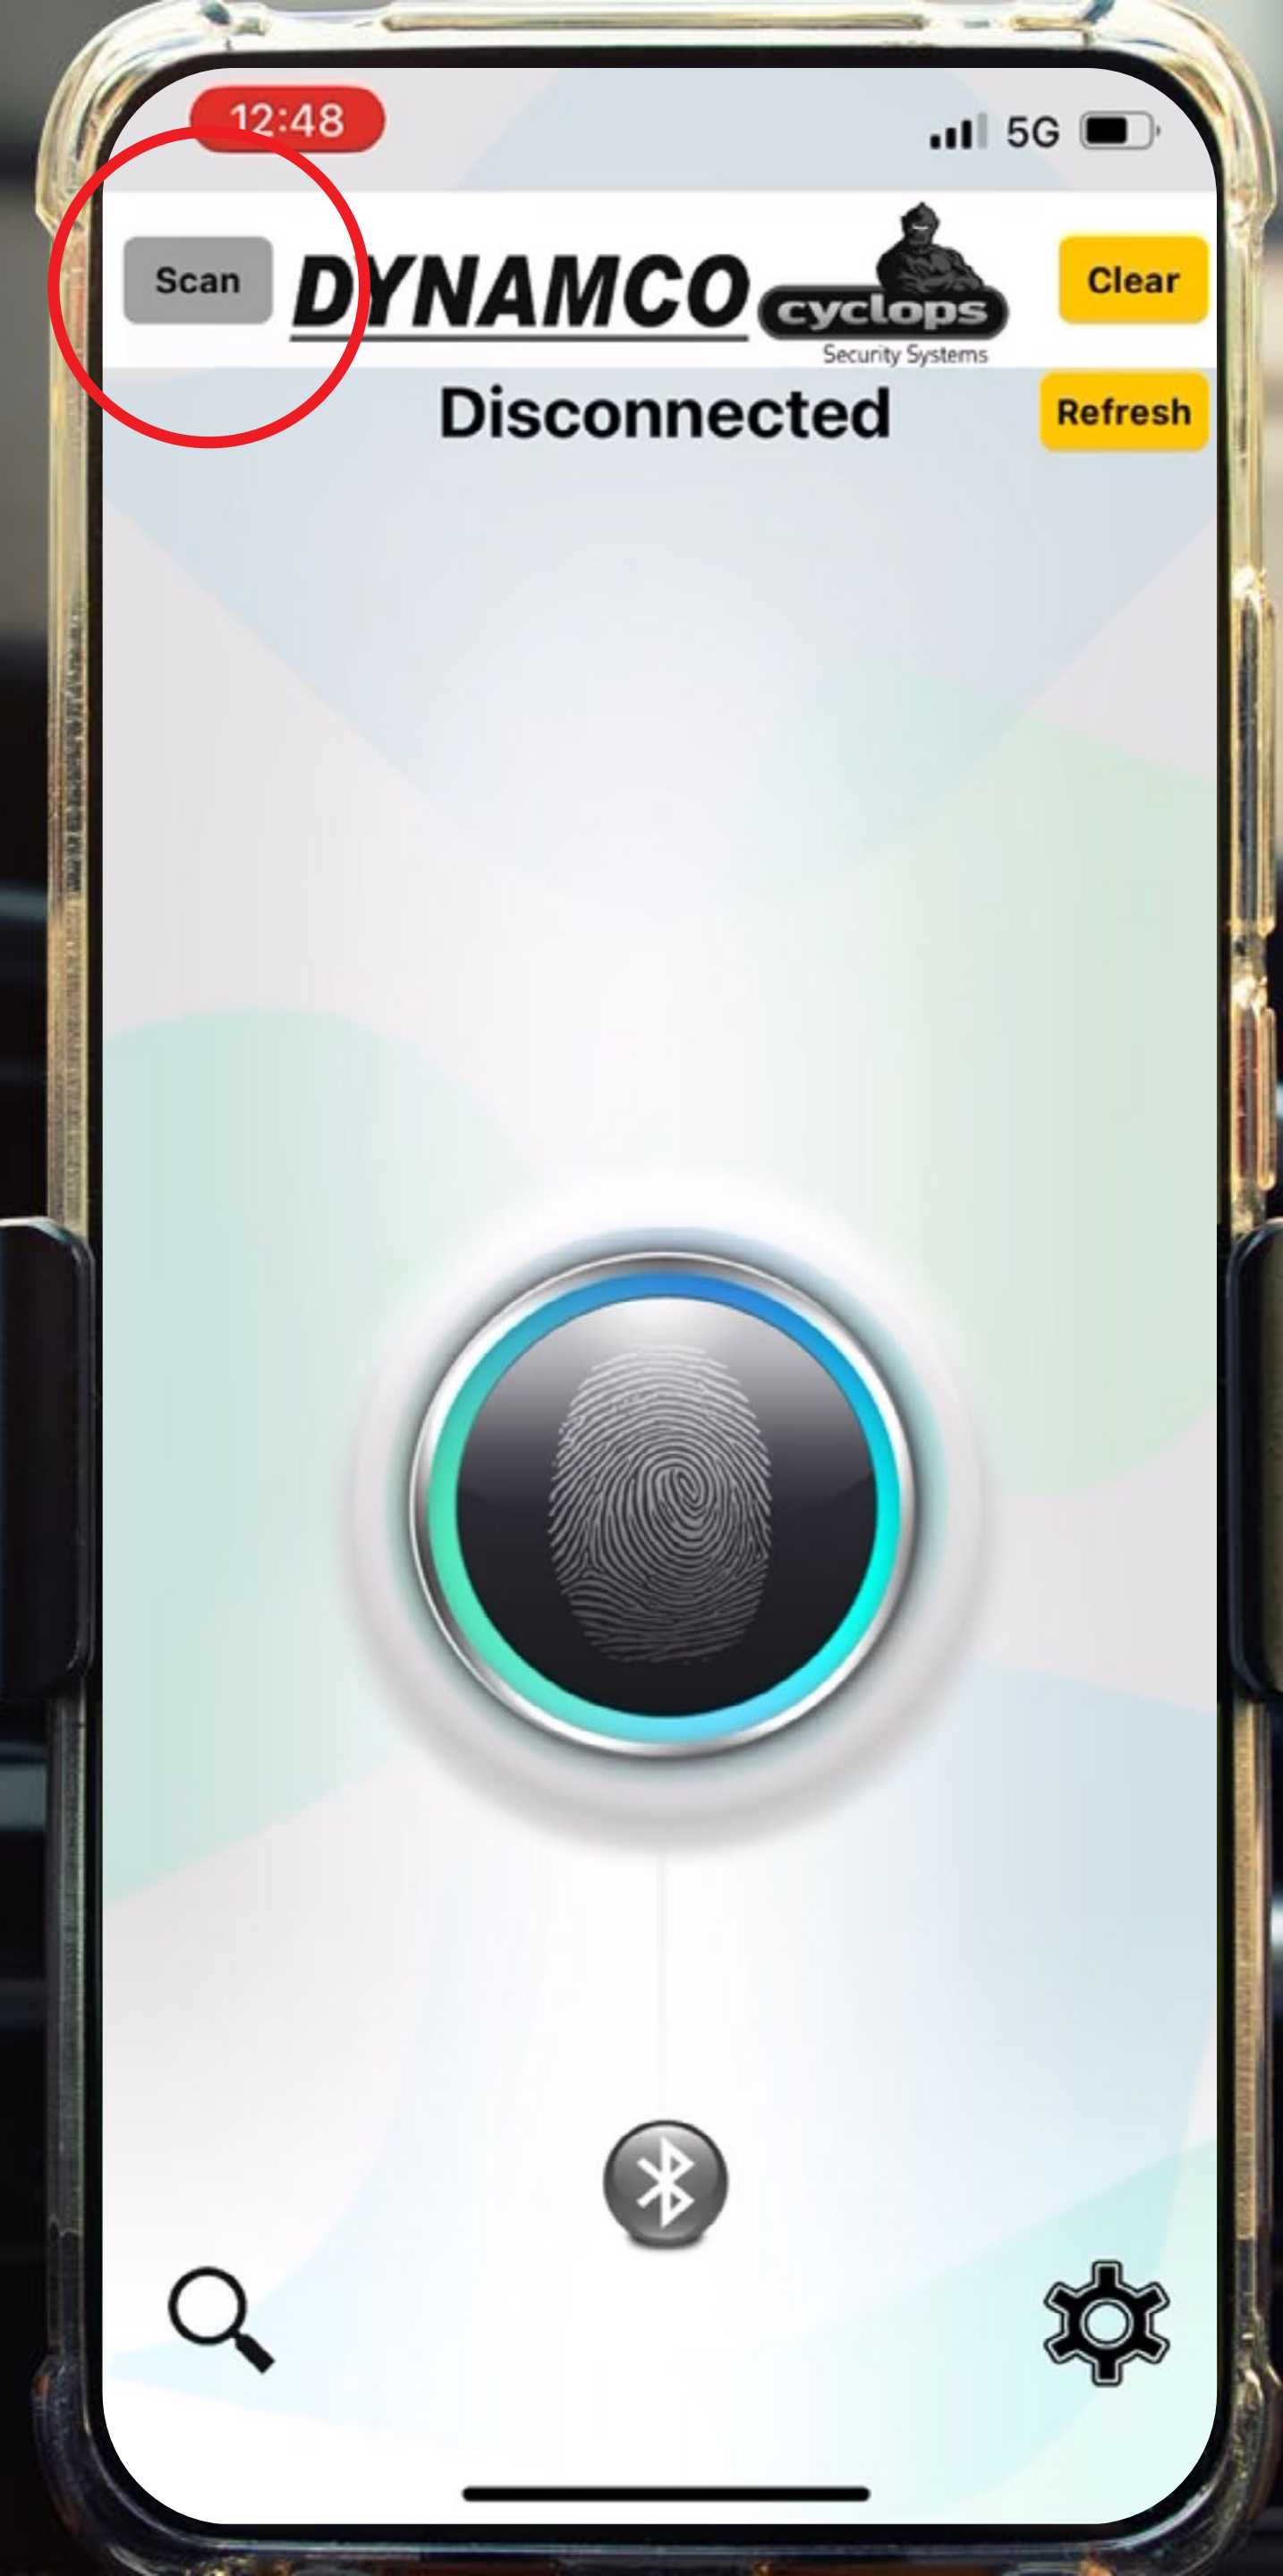




STEP 5

APPLE & ANDROID

☒ Select DYN-BTI

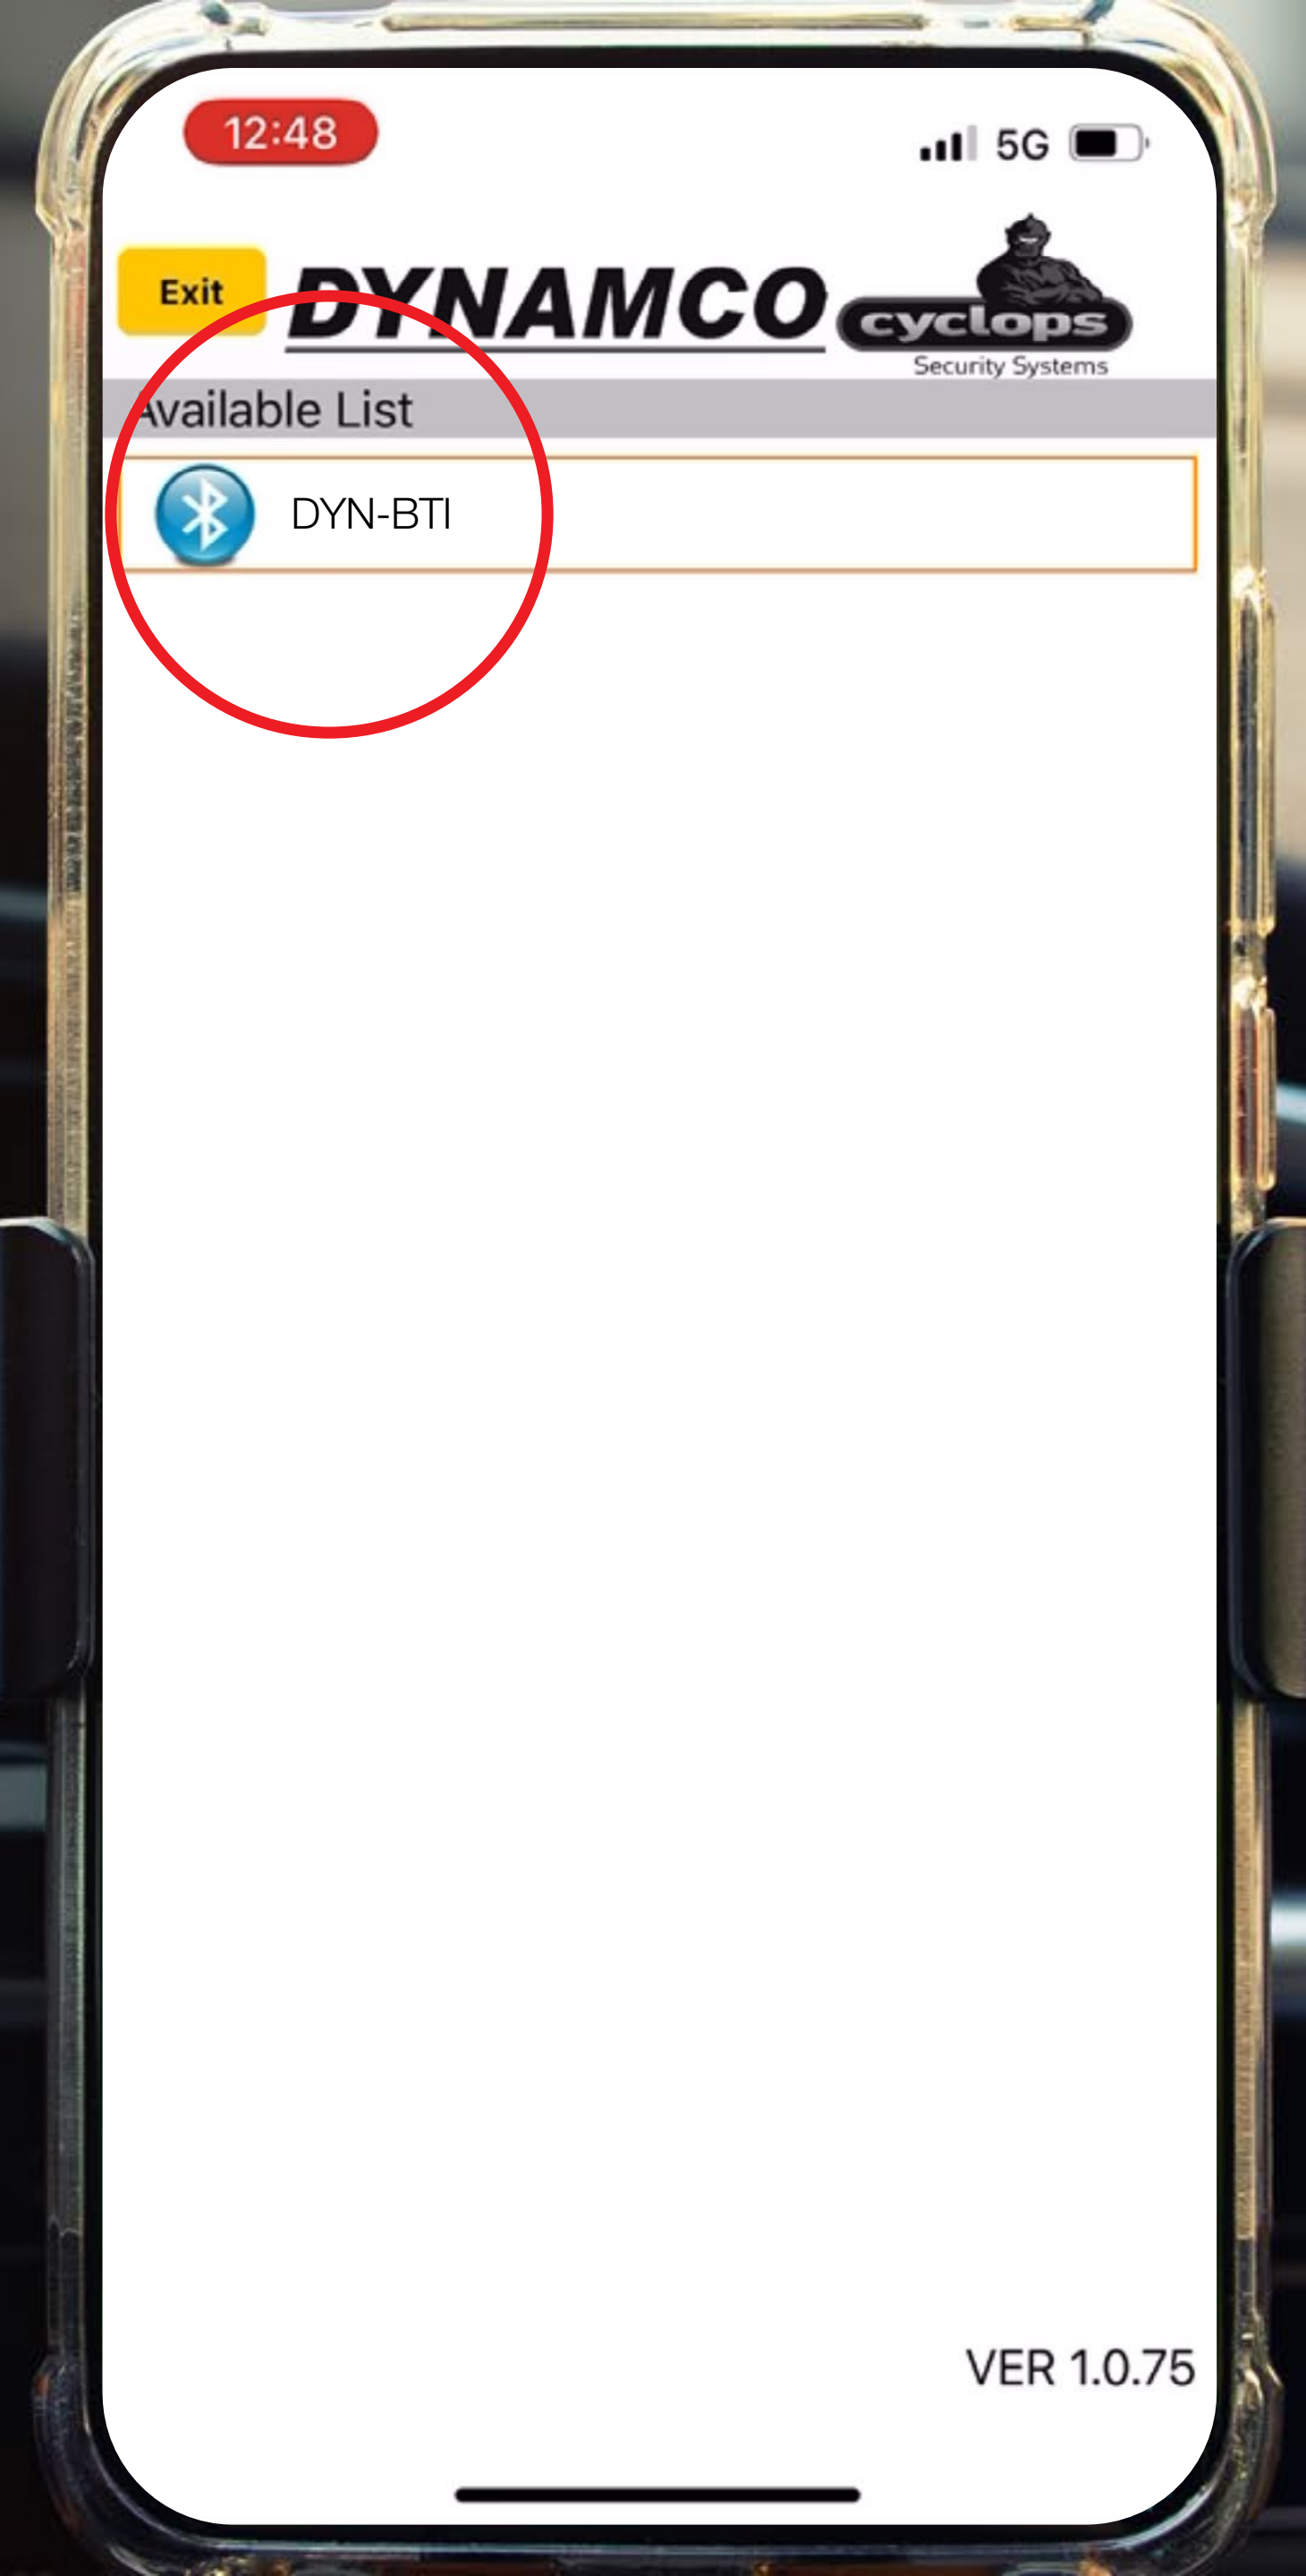




STEP 5

APPLE & ANDROID

- ✓ This may take a few moments to connect

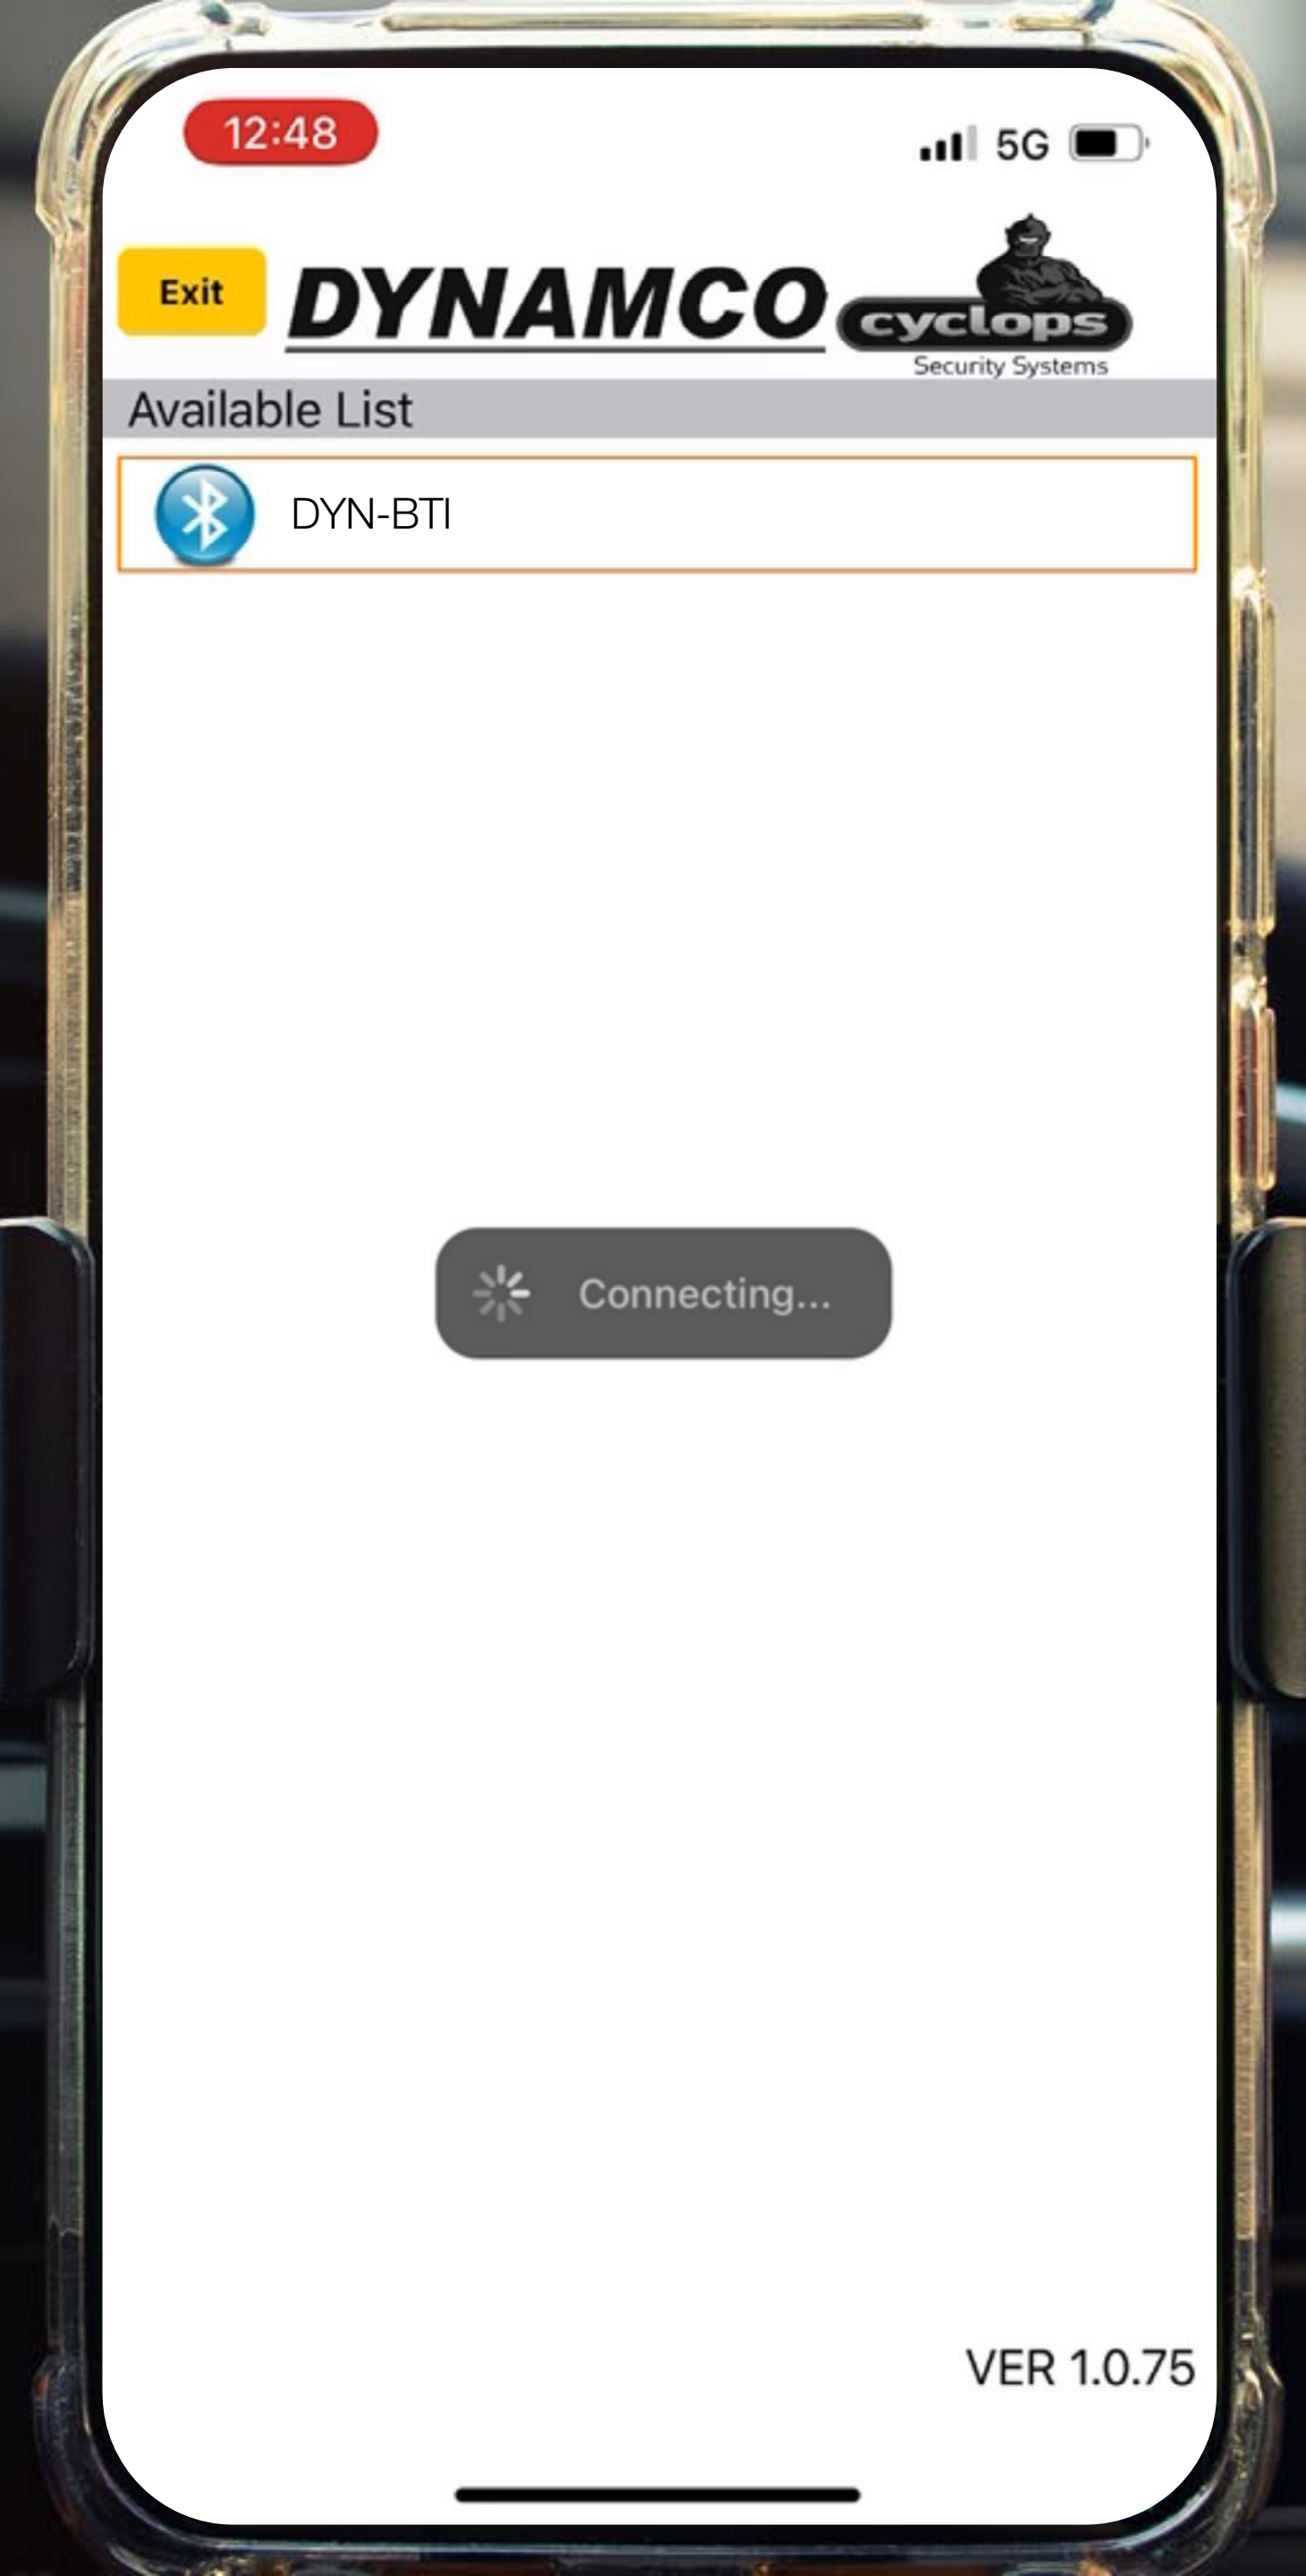




STEP 6

APPLE & ANDROID

- ✓ Enter PIN 123456 to connect

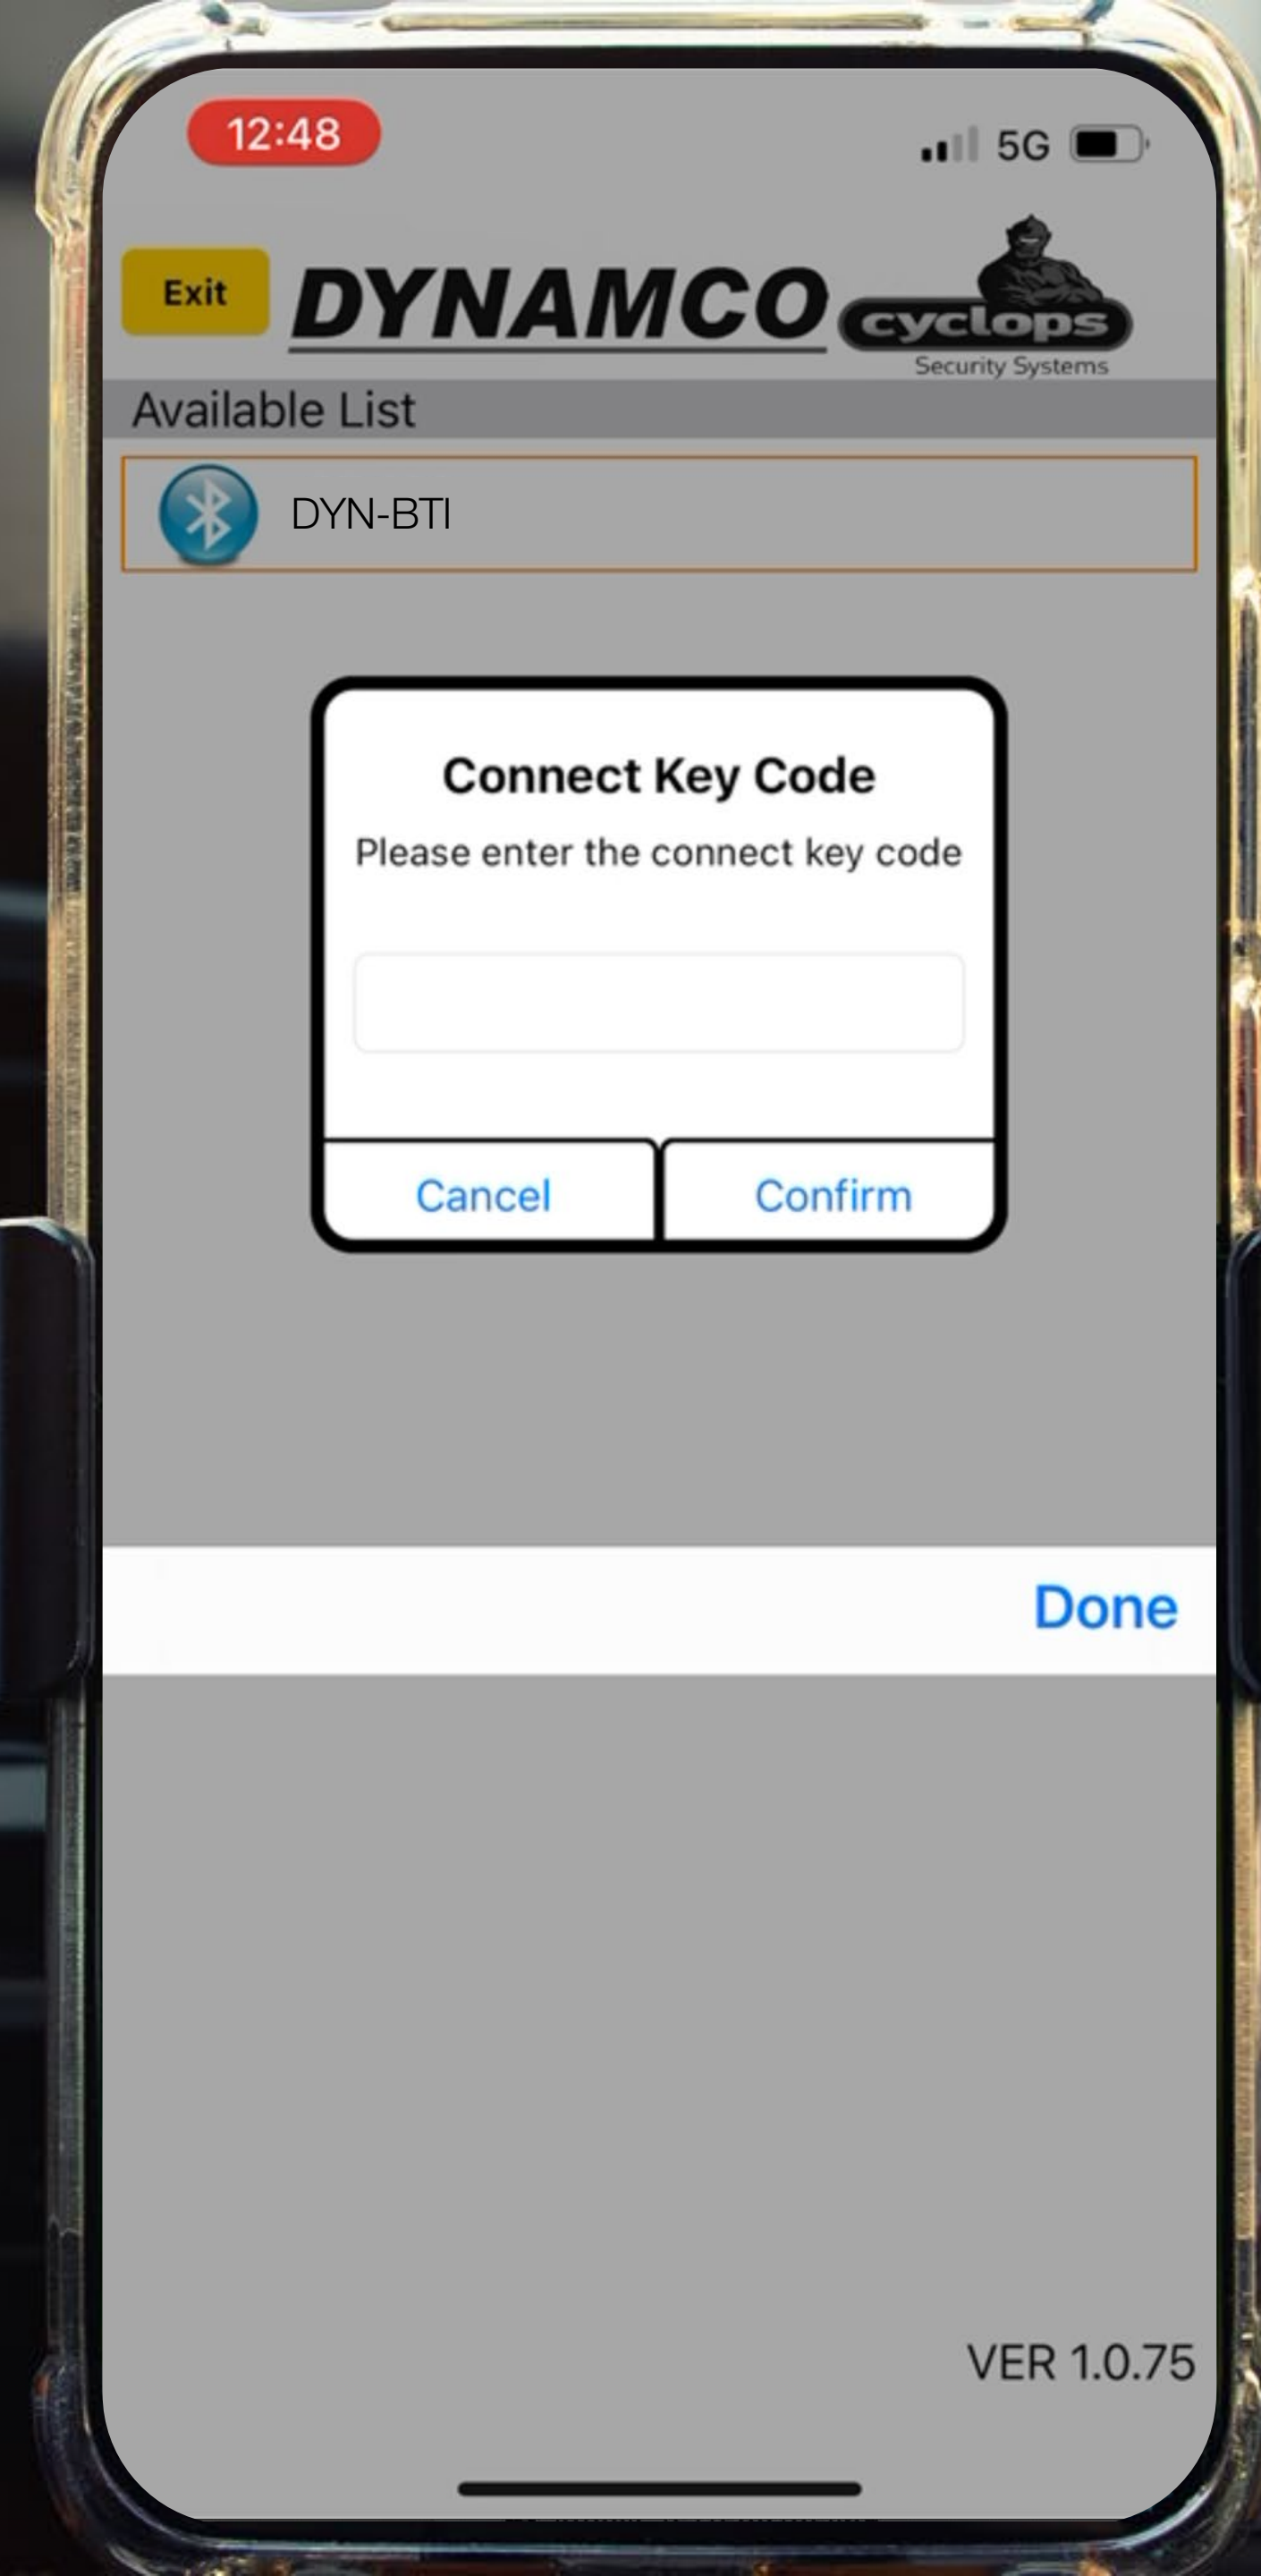




STEP 7

APPLE & ANDROID

☒ Press OK to pair

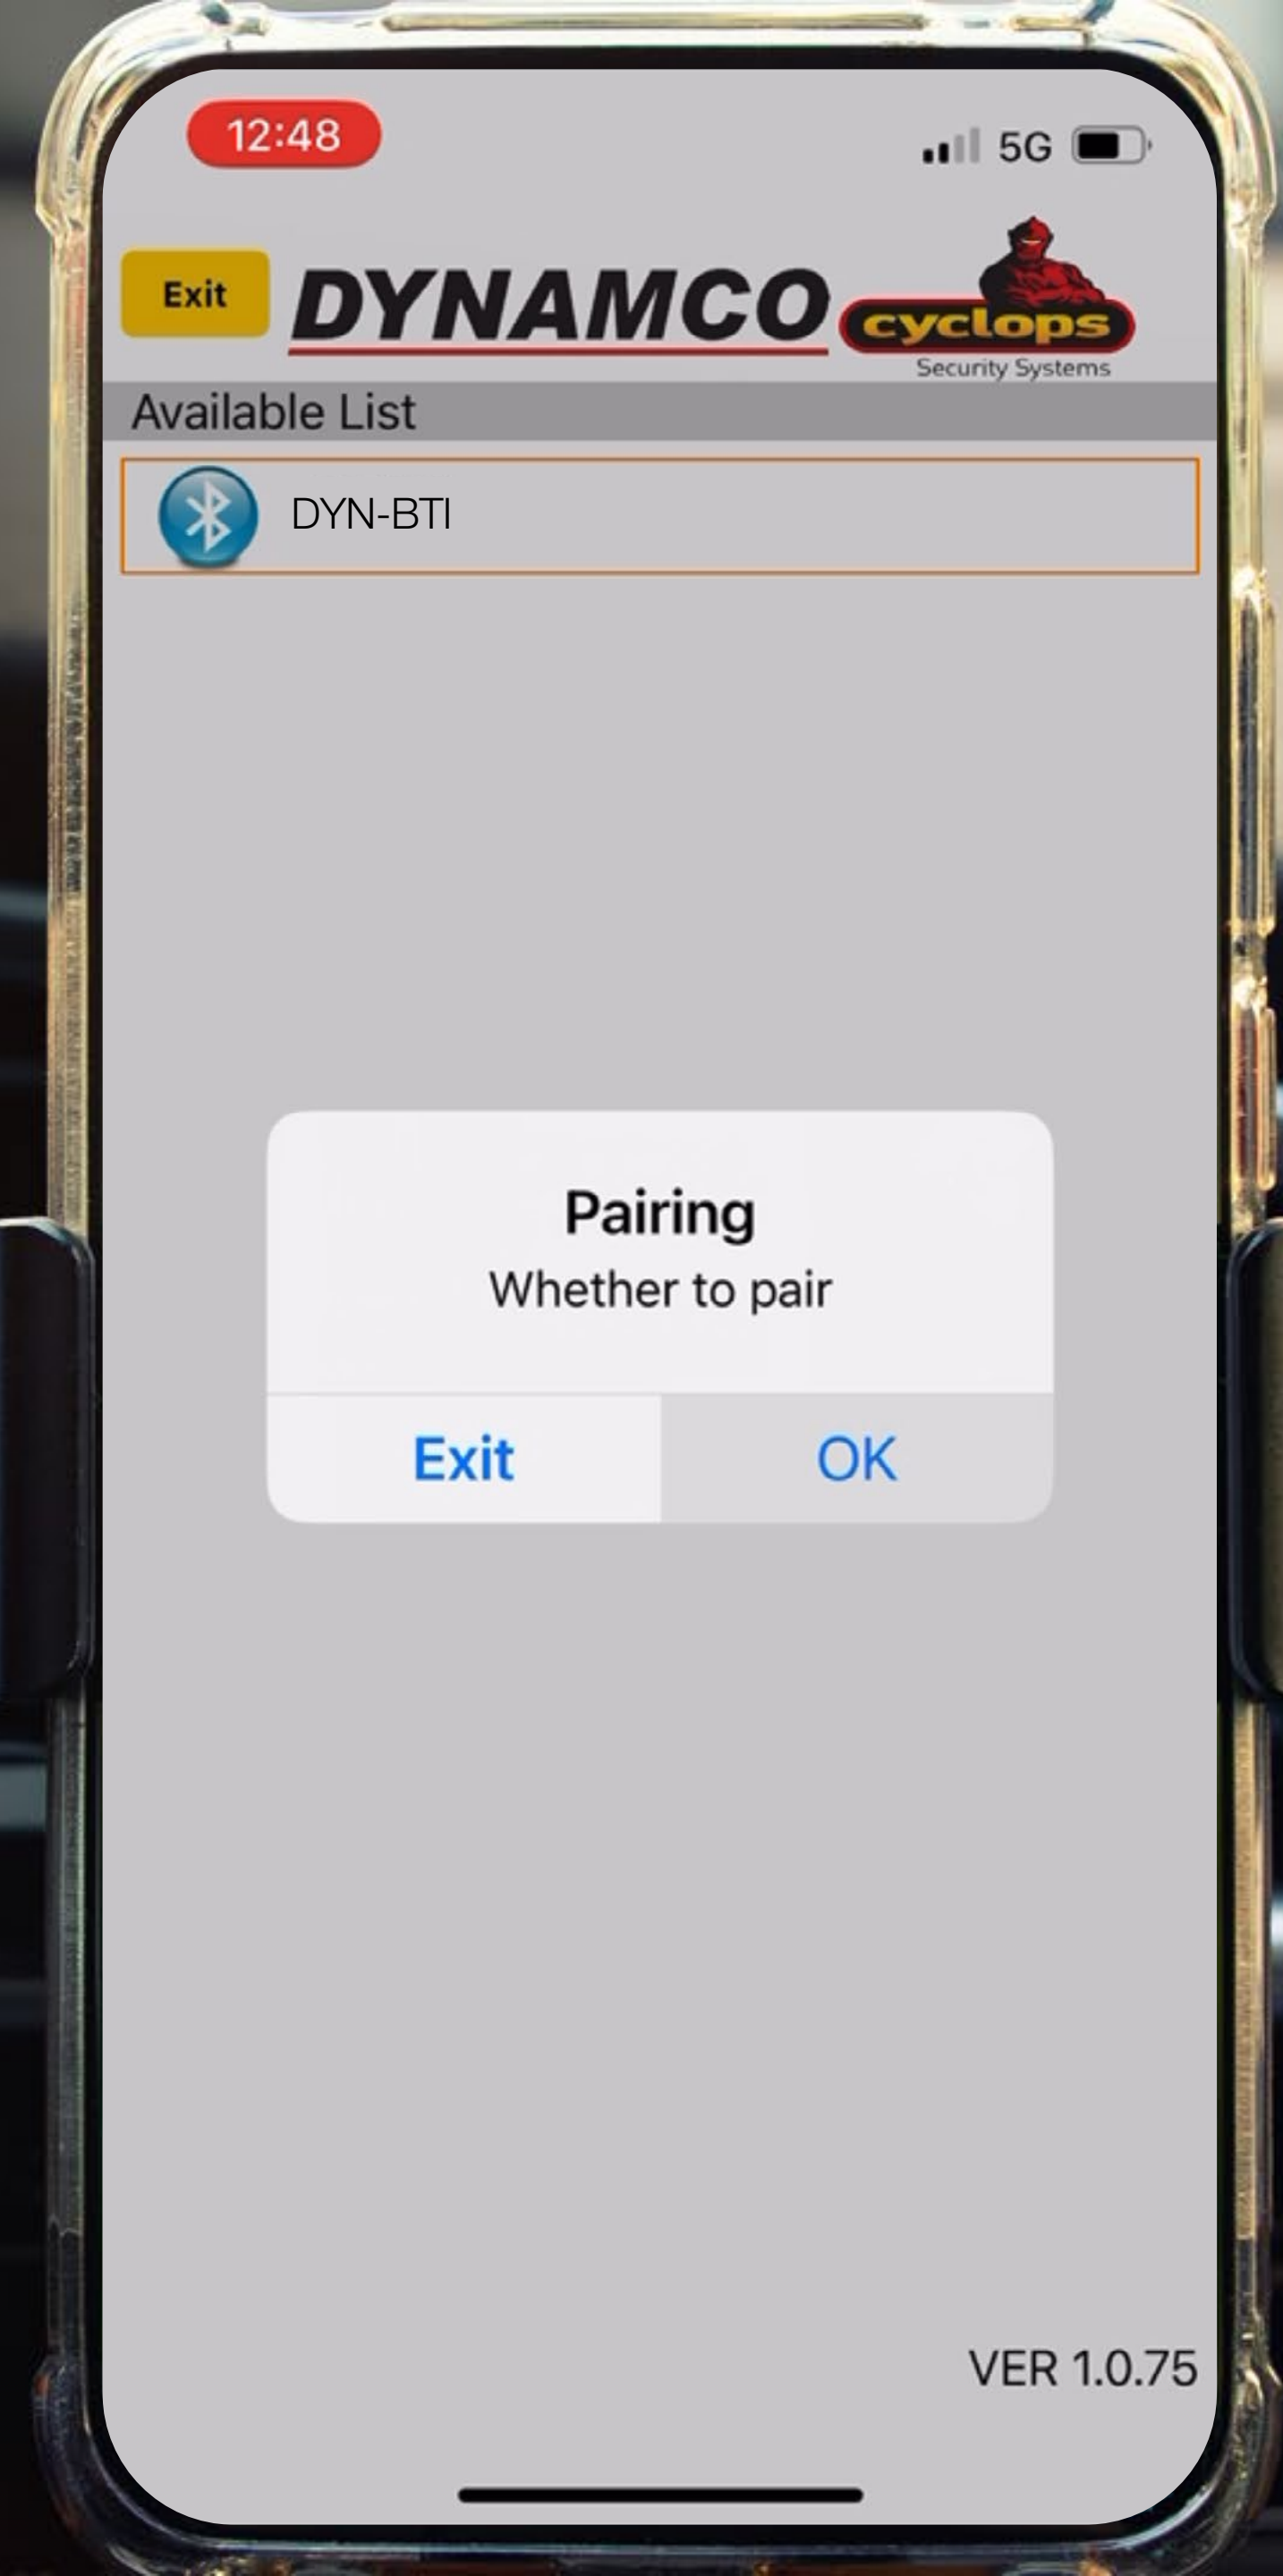




STEP 8

APPLE & ANDROID

- ✓ Enter PIN 123456 again for Bluetooth Pairing request
- ✓ This may take a few moments to connect

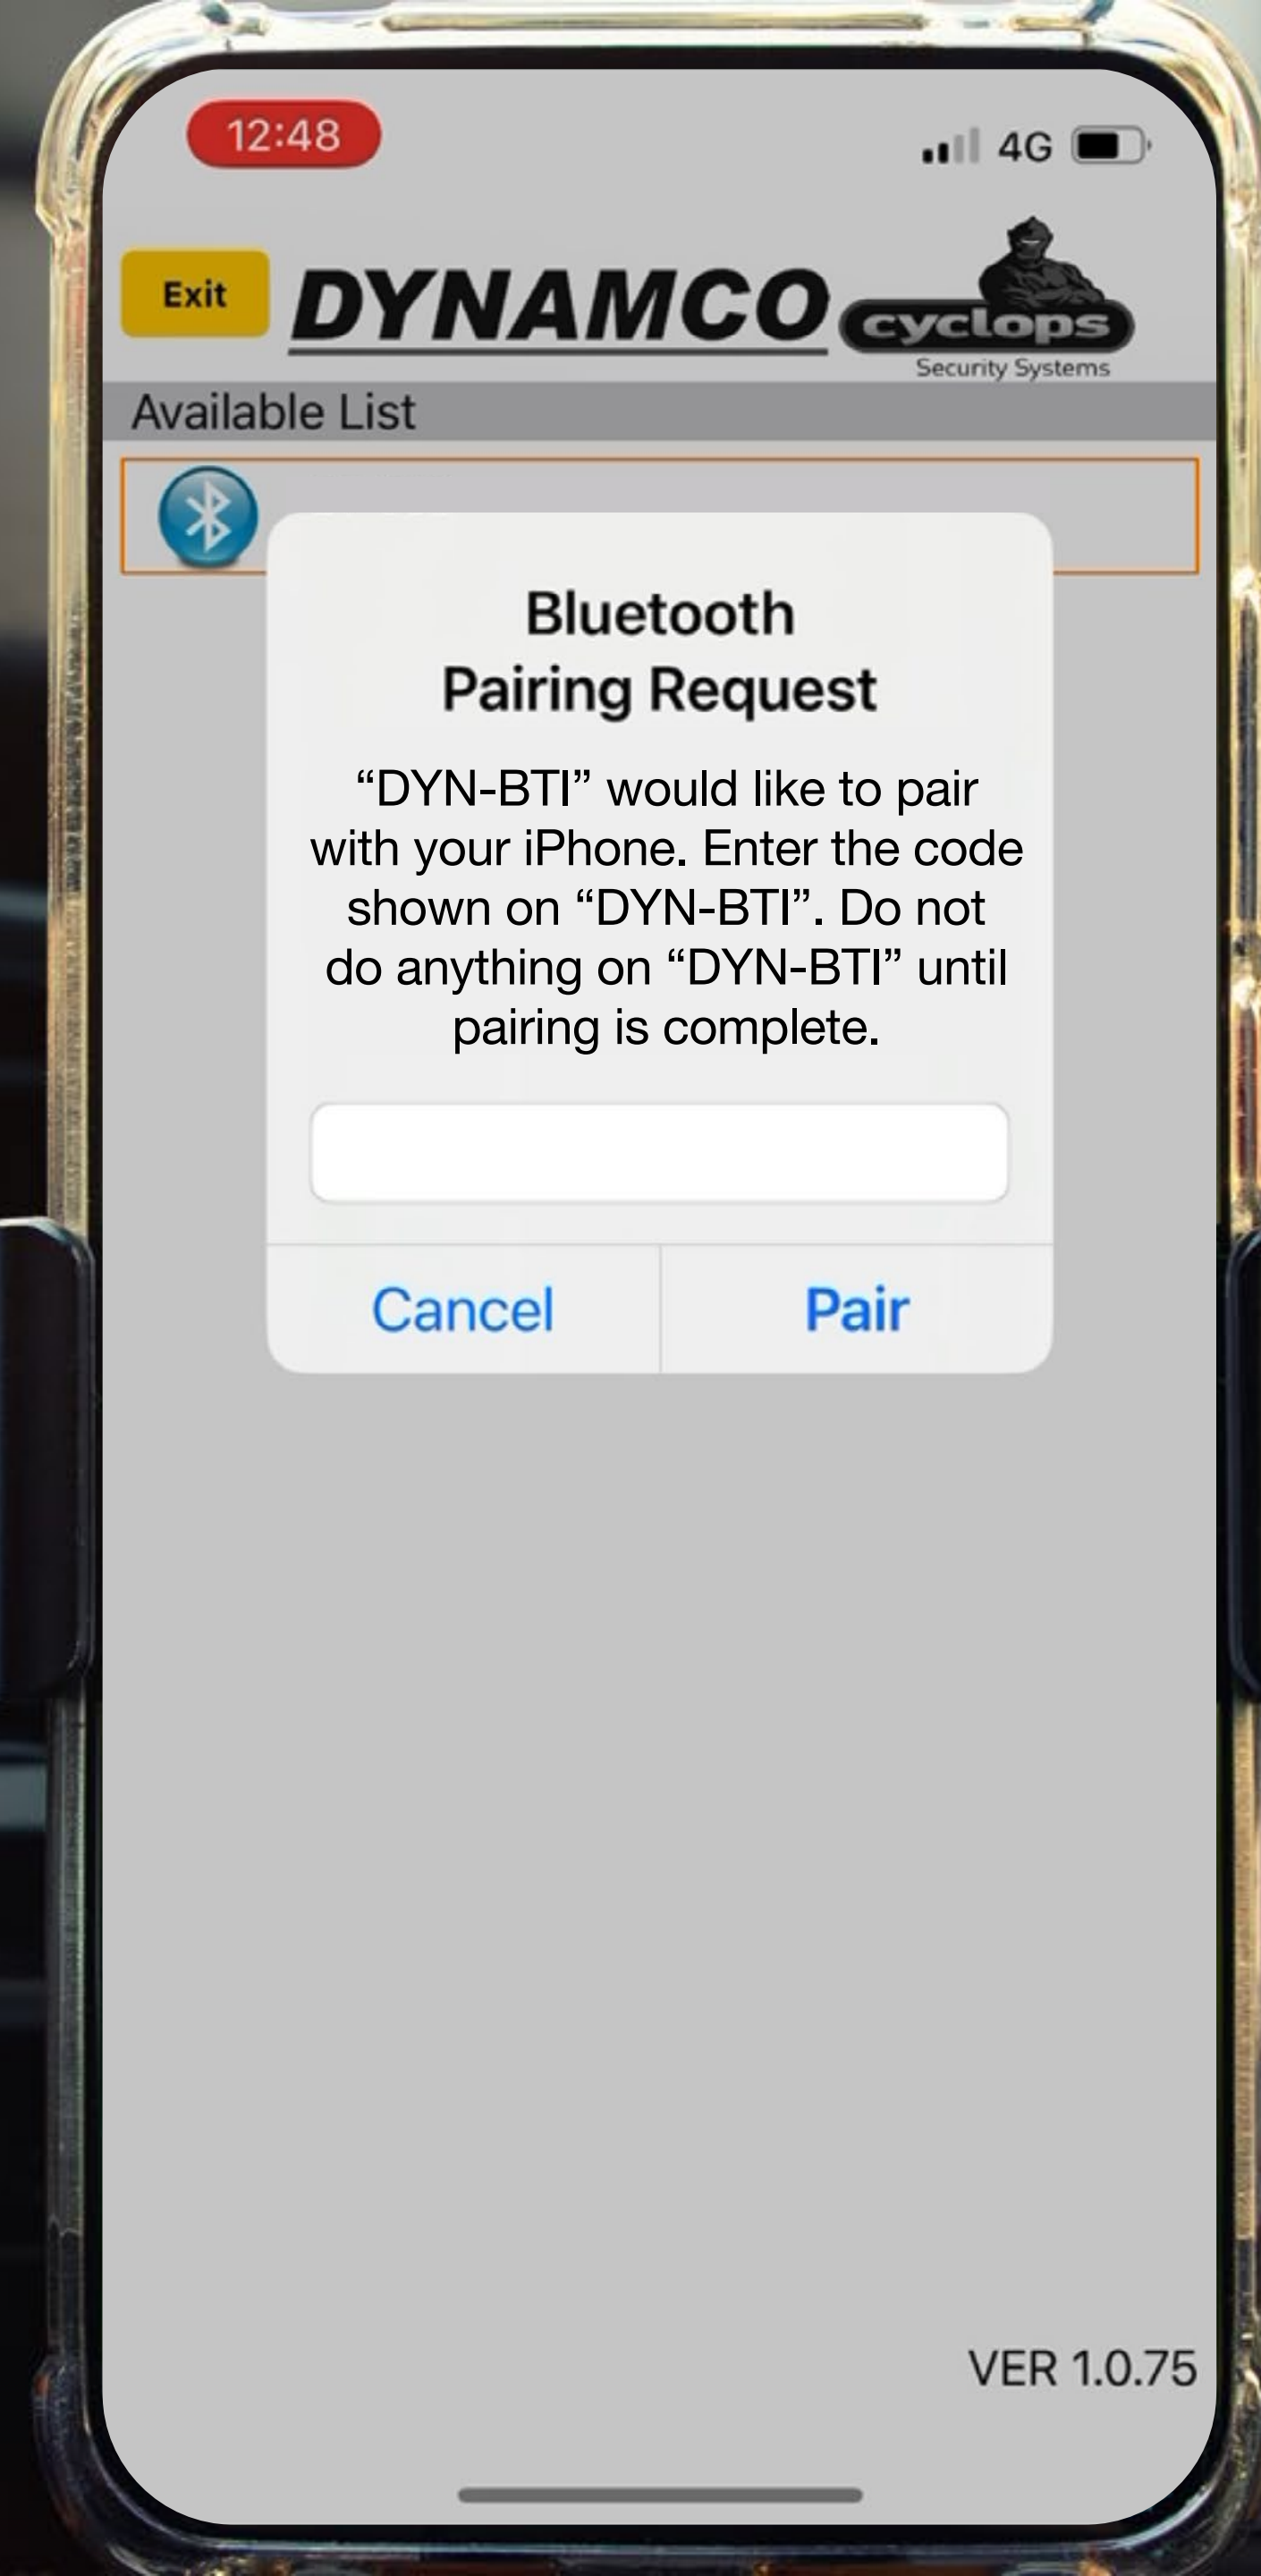




YOU ARE CONNECTED TO THE BTI

APPLE & ANDROID


- ☒ You will notice the Cyclops logo is now in colour

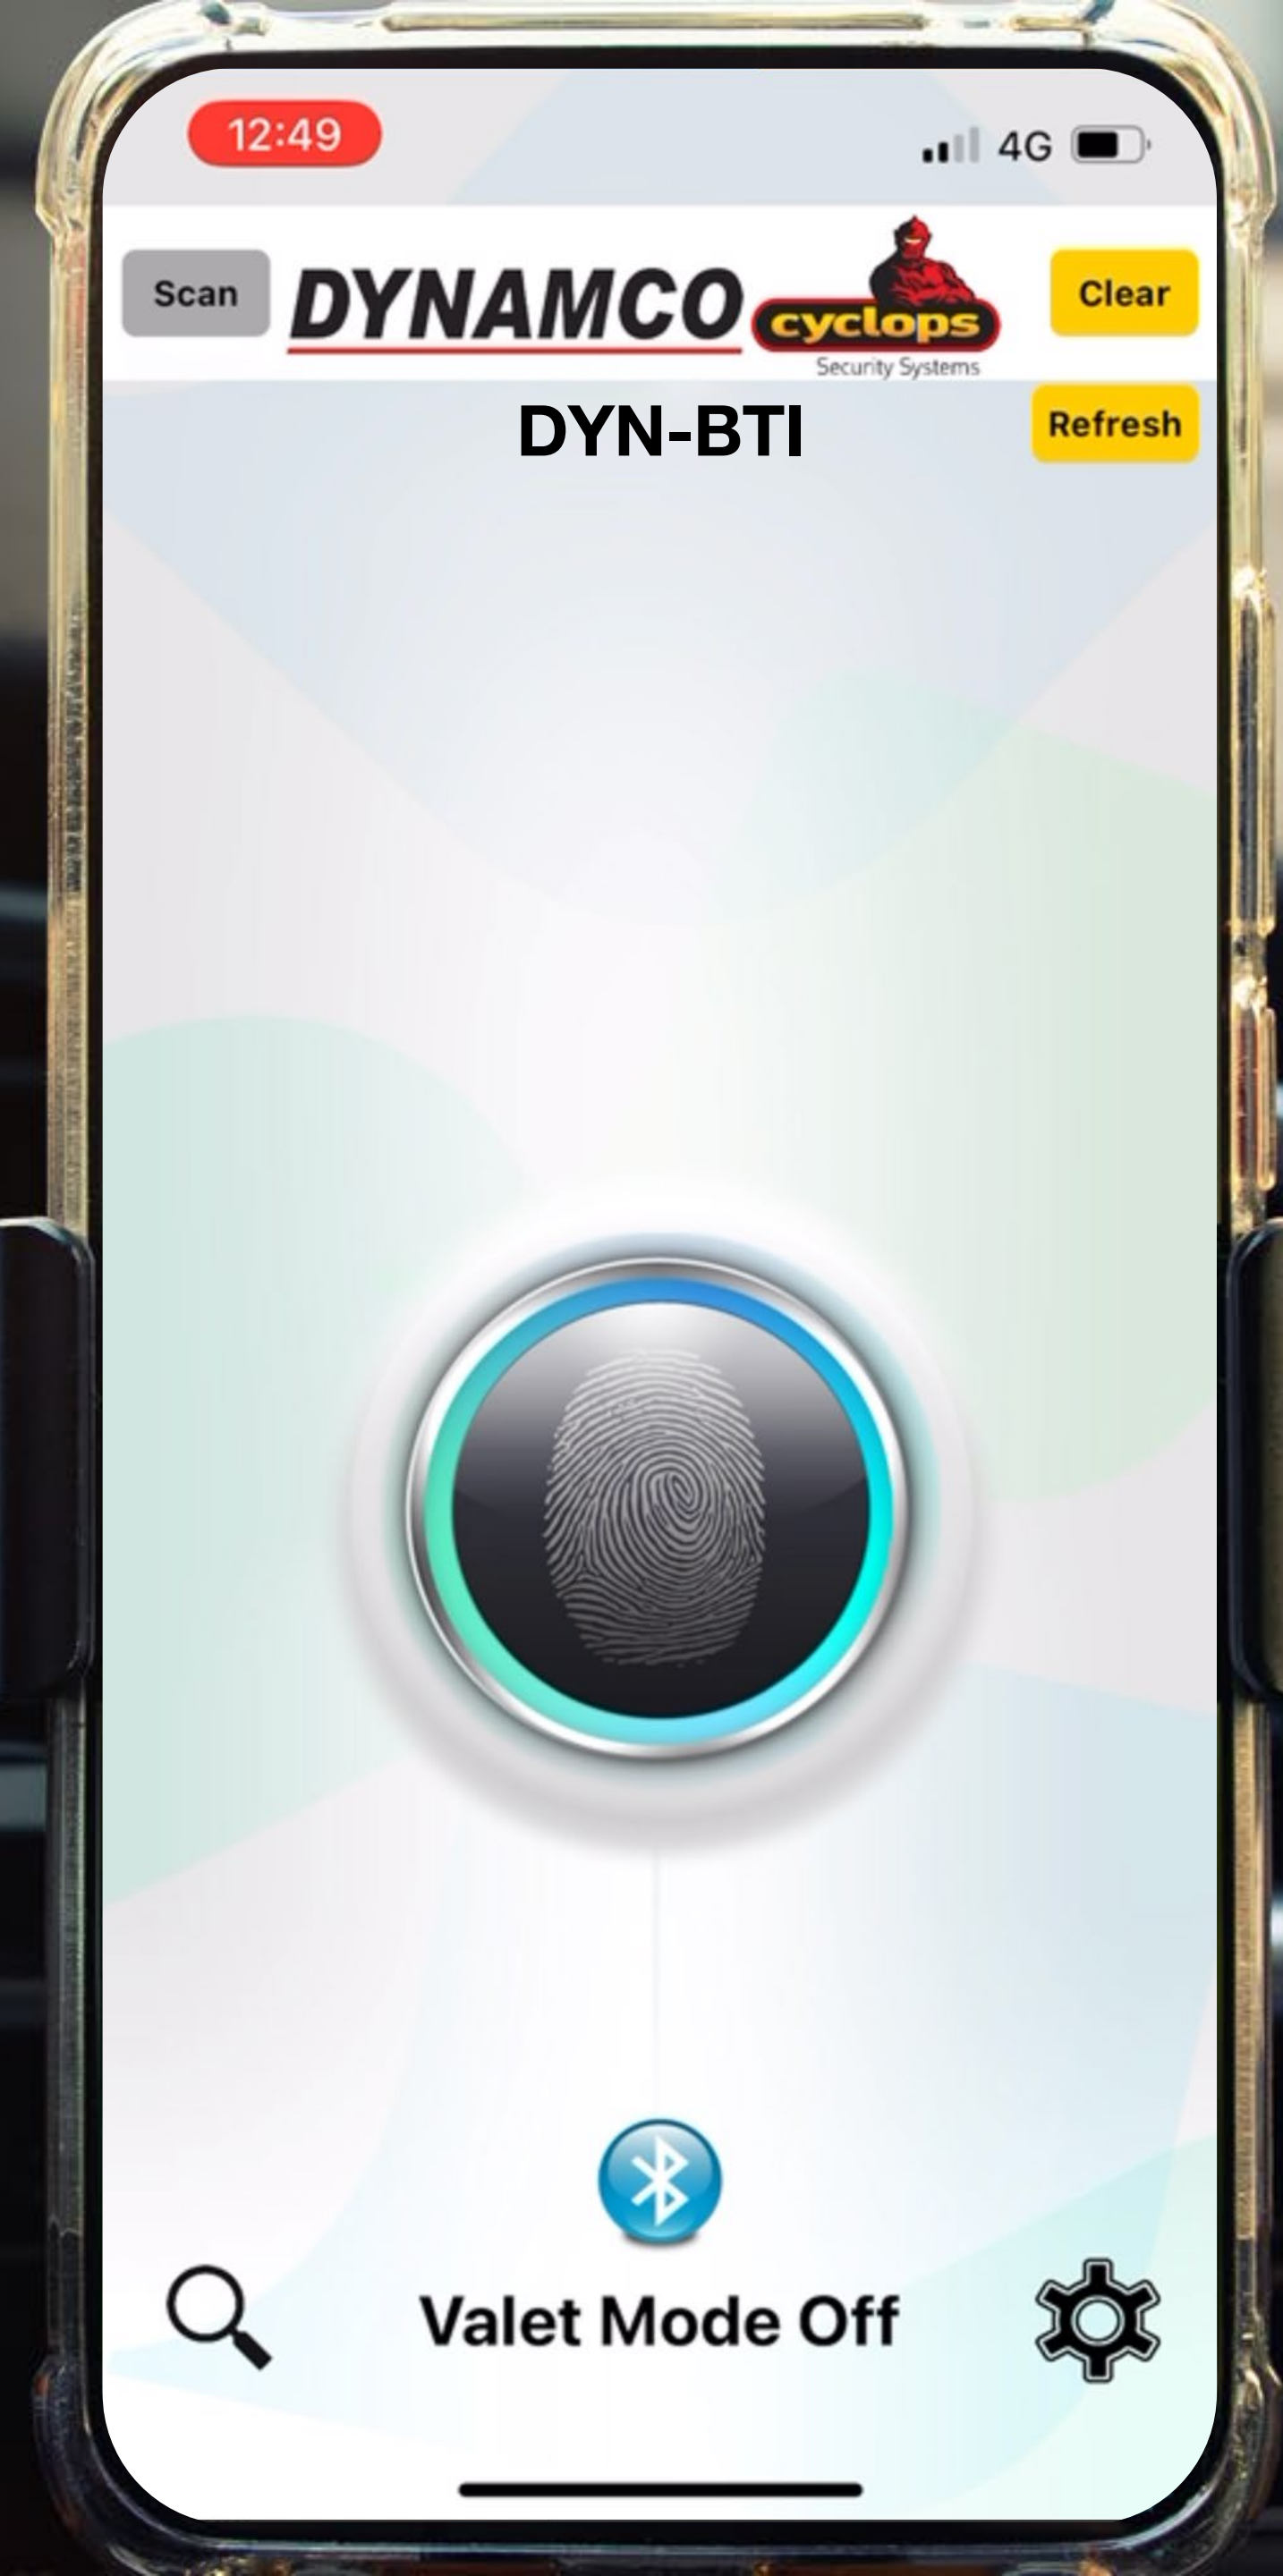



FOR ANDROID PHONES ONLY


- ✓ Please close App and select DYN-BTI from the phones bluetooth device list, re-open Cyclops App and enter password 123456

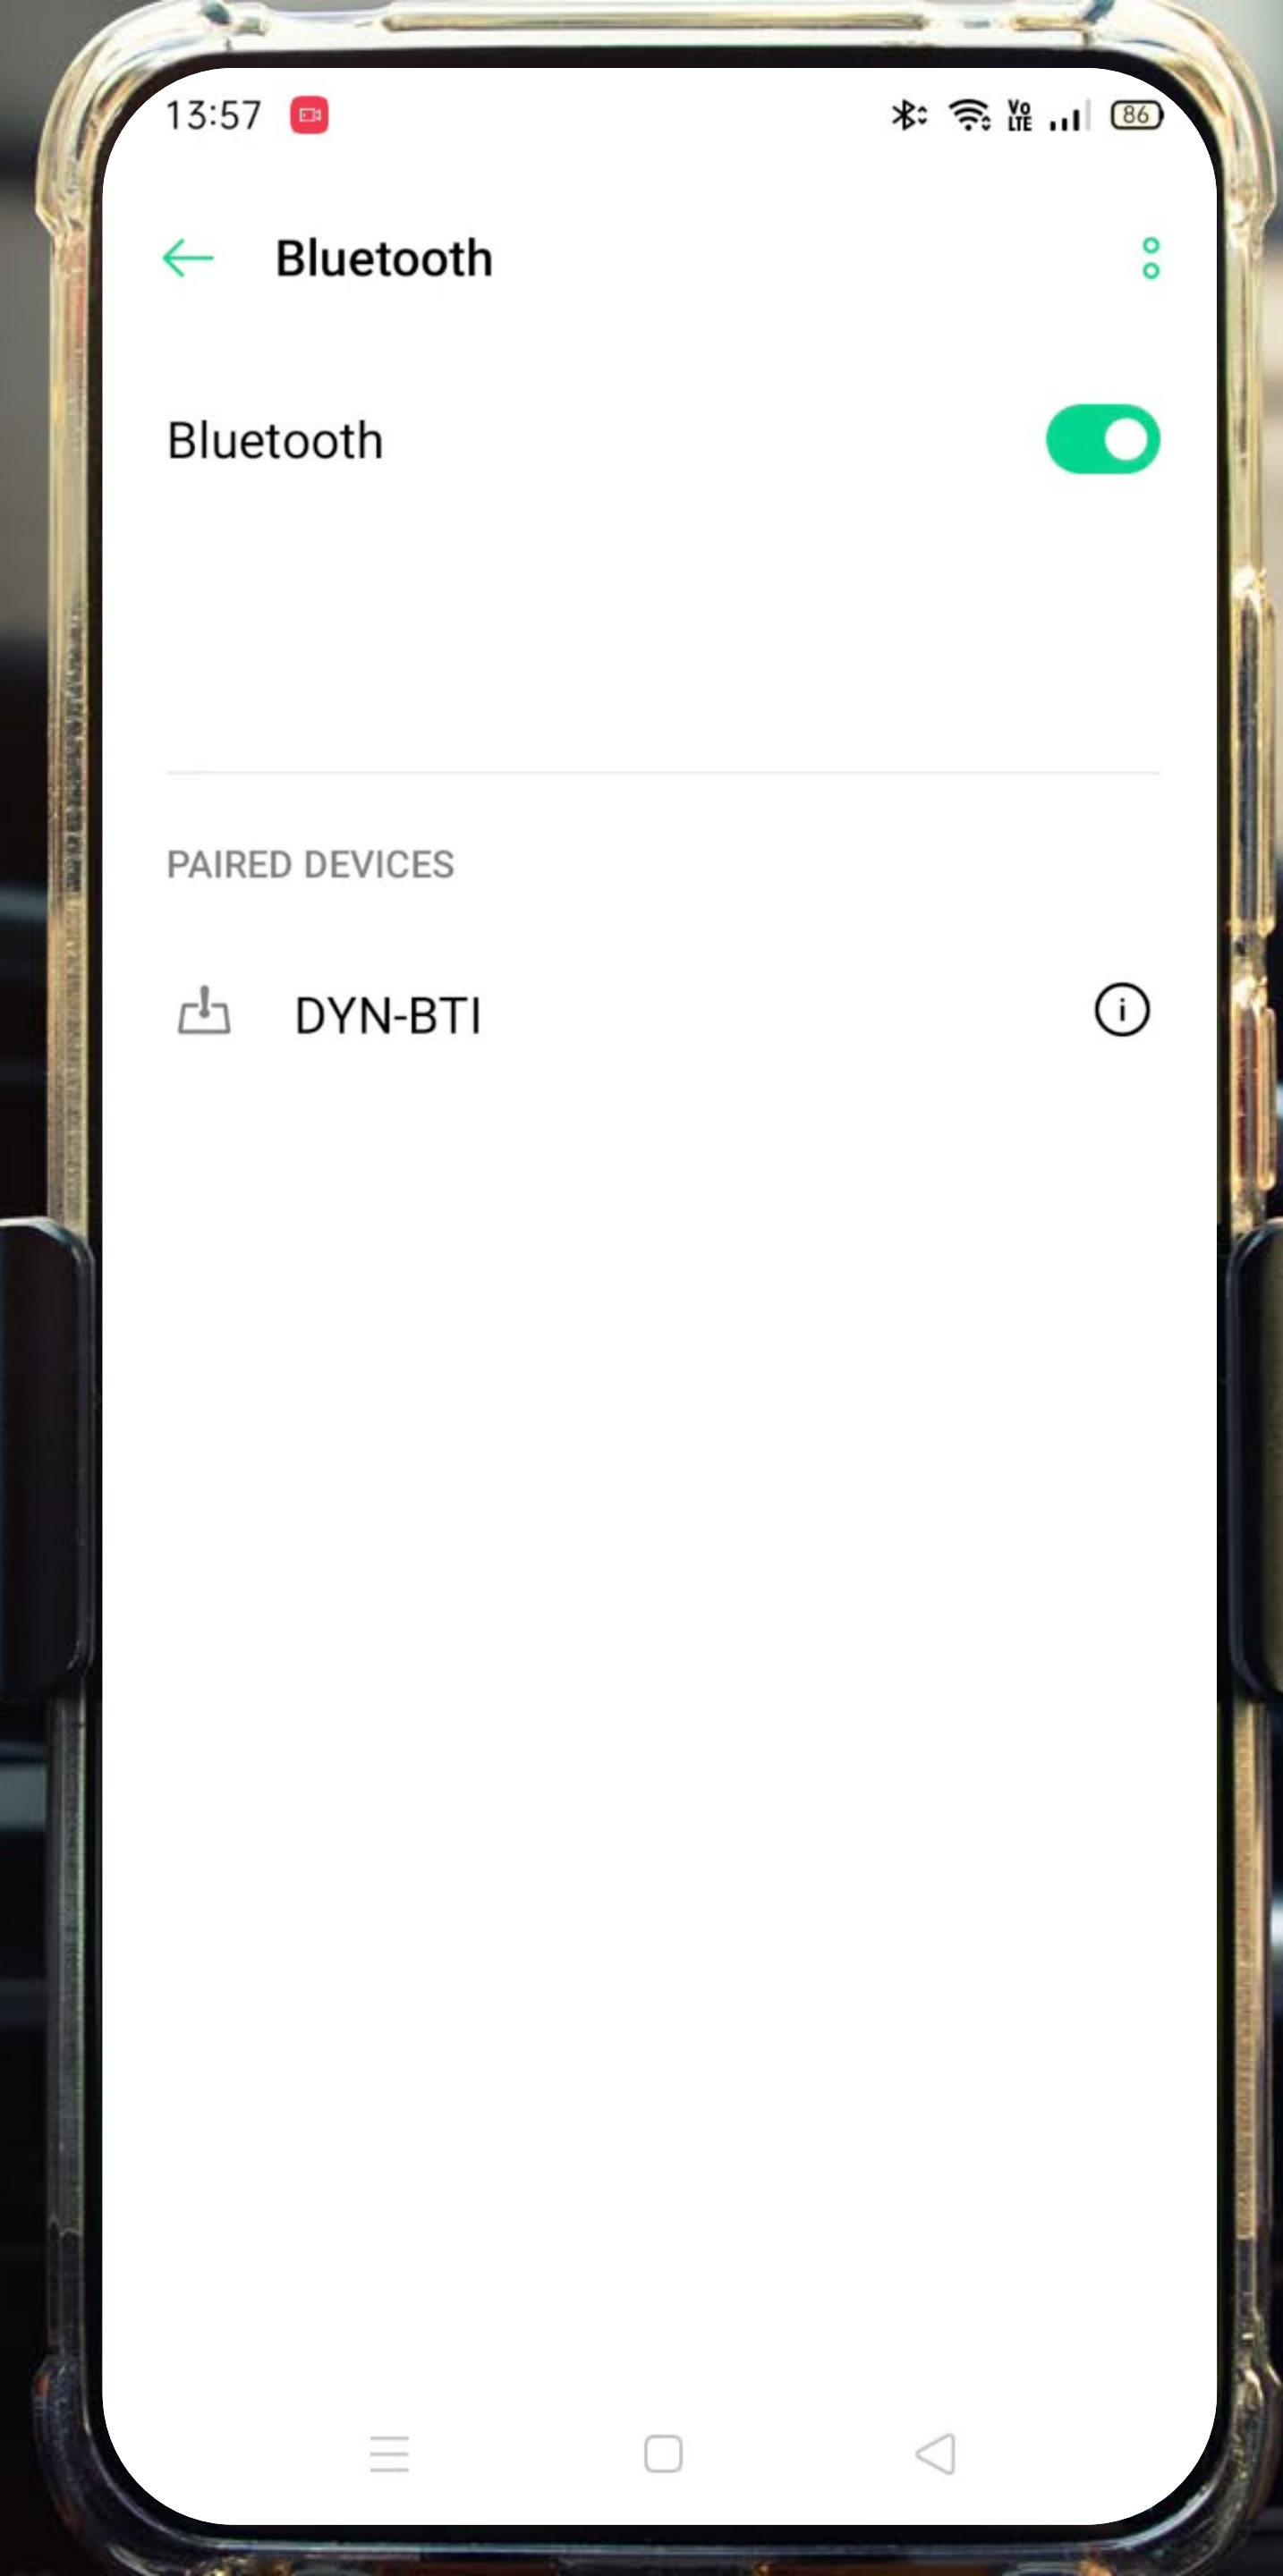



FOR ANDROID PHONES ONLY


- ✓ Please close App and select DYN-BTI from the phones bluetooth device list, re-open Cyclops App and enter password 123456

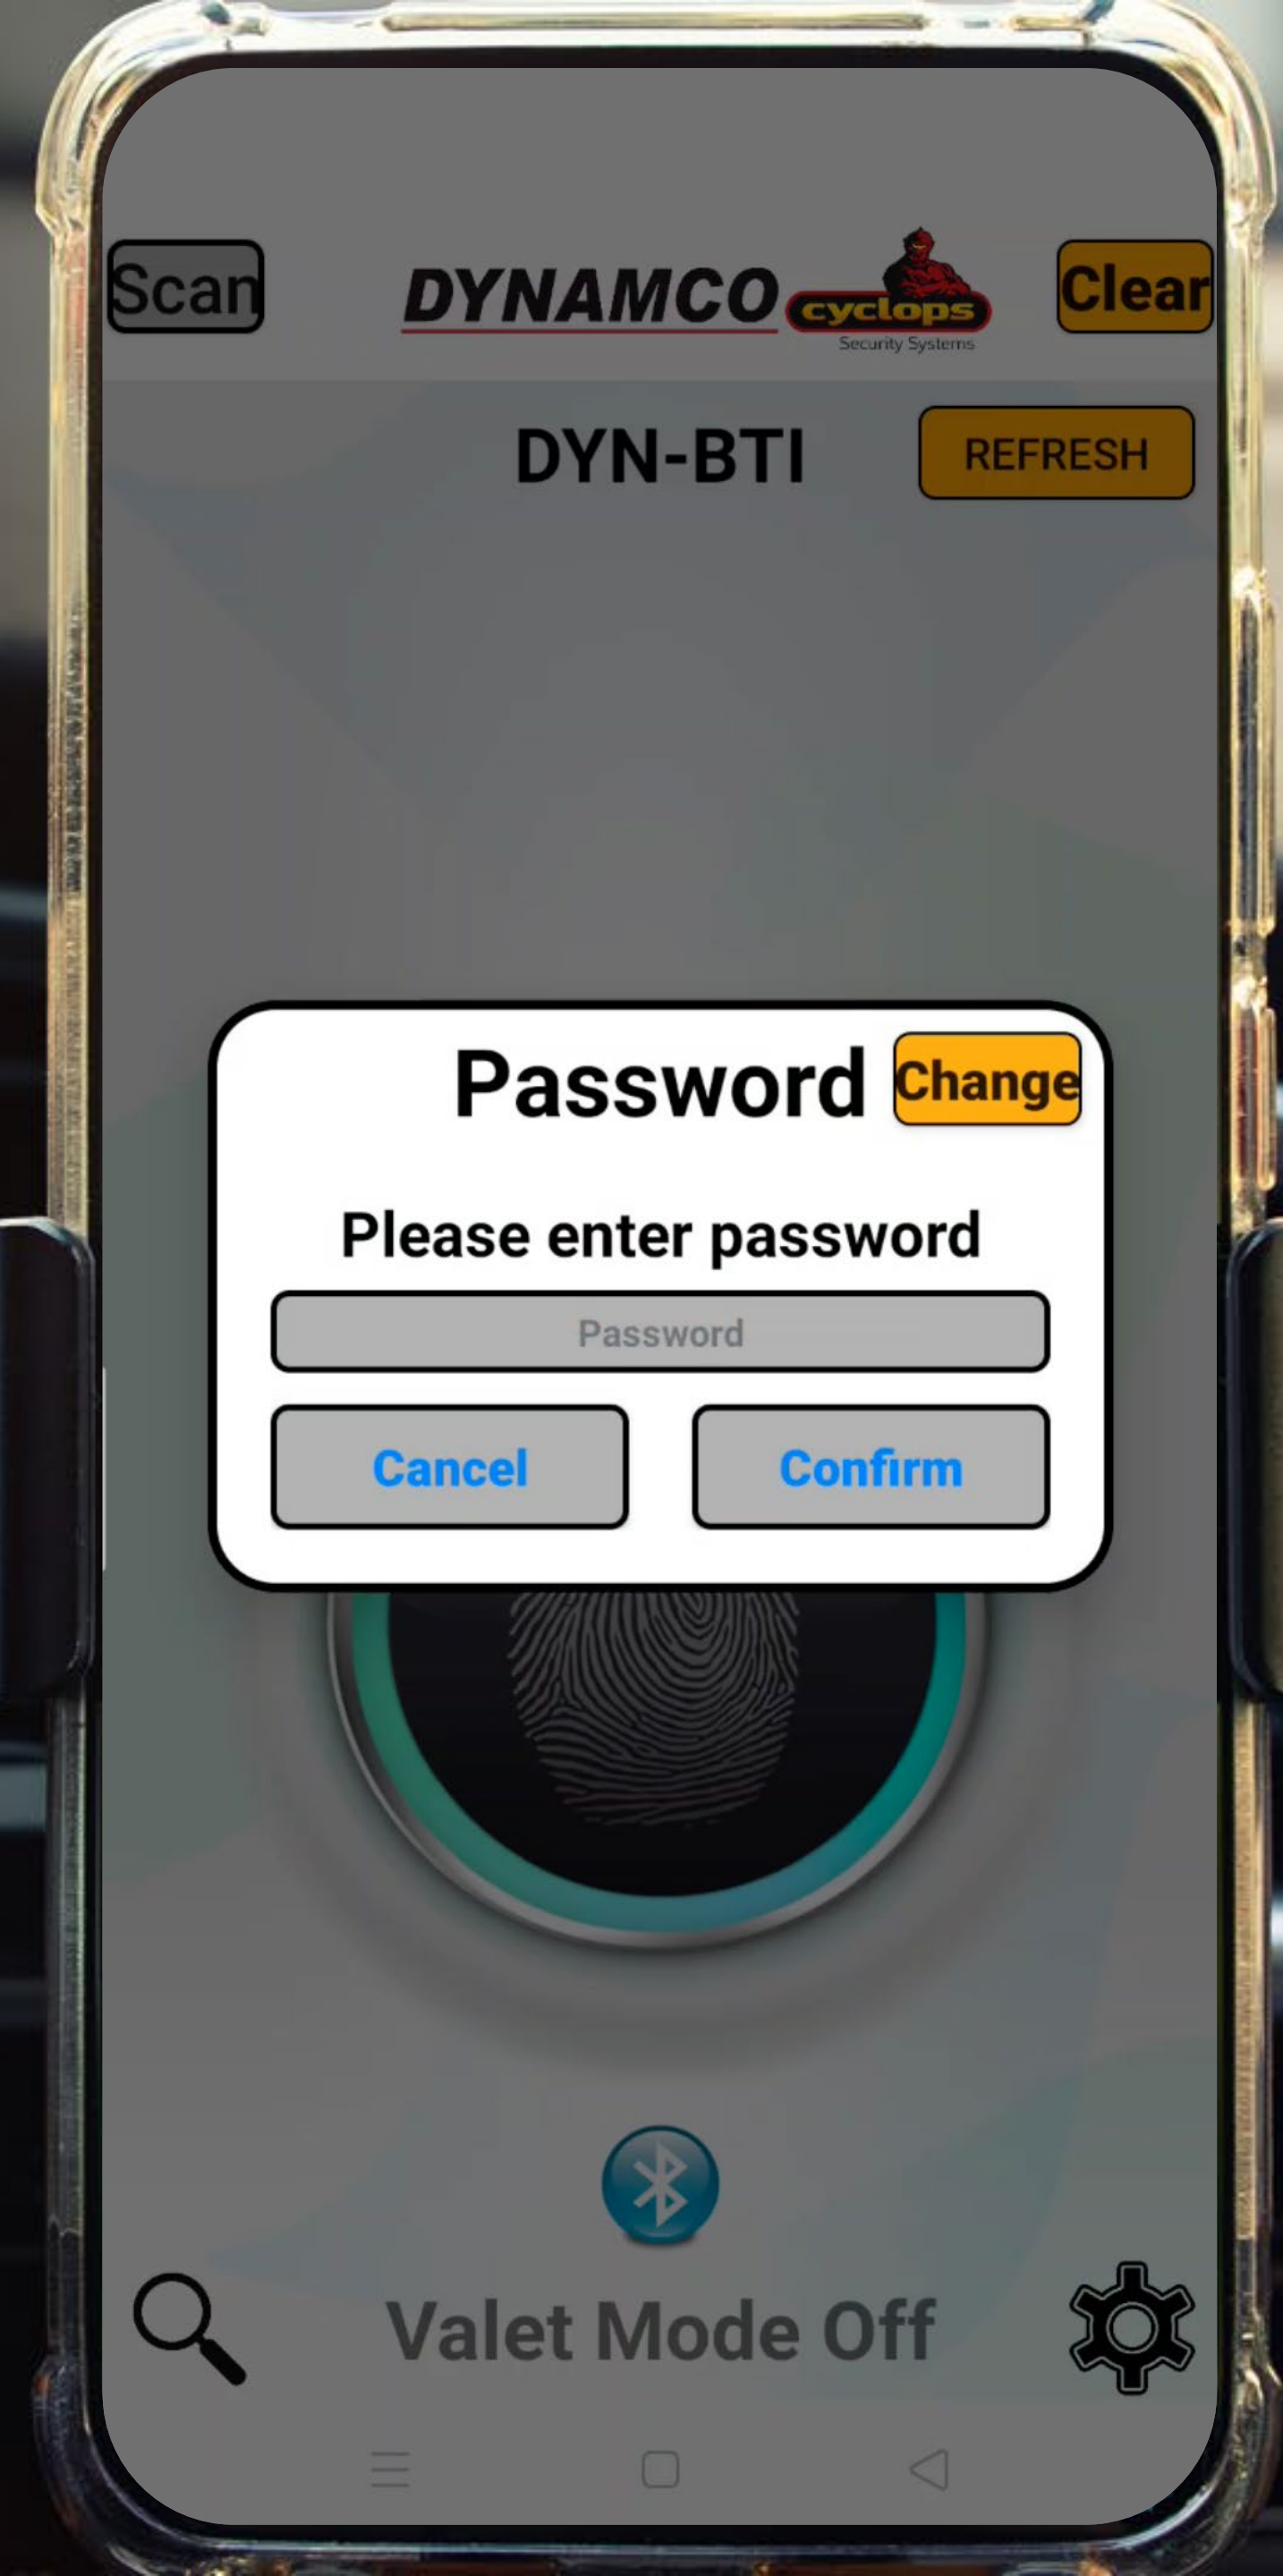



FOR ANDROID PHONES ONLY

- ✓ Follow the prompts to set a unique PIN Connect Key Code
PIN must be 6-digits numeric only.

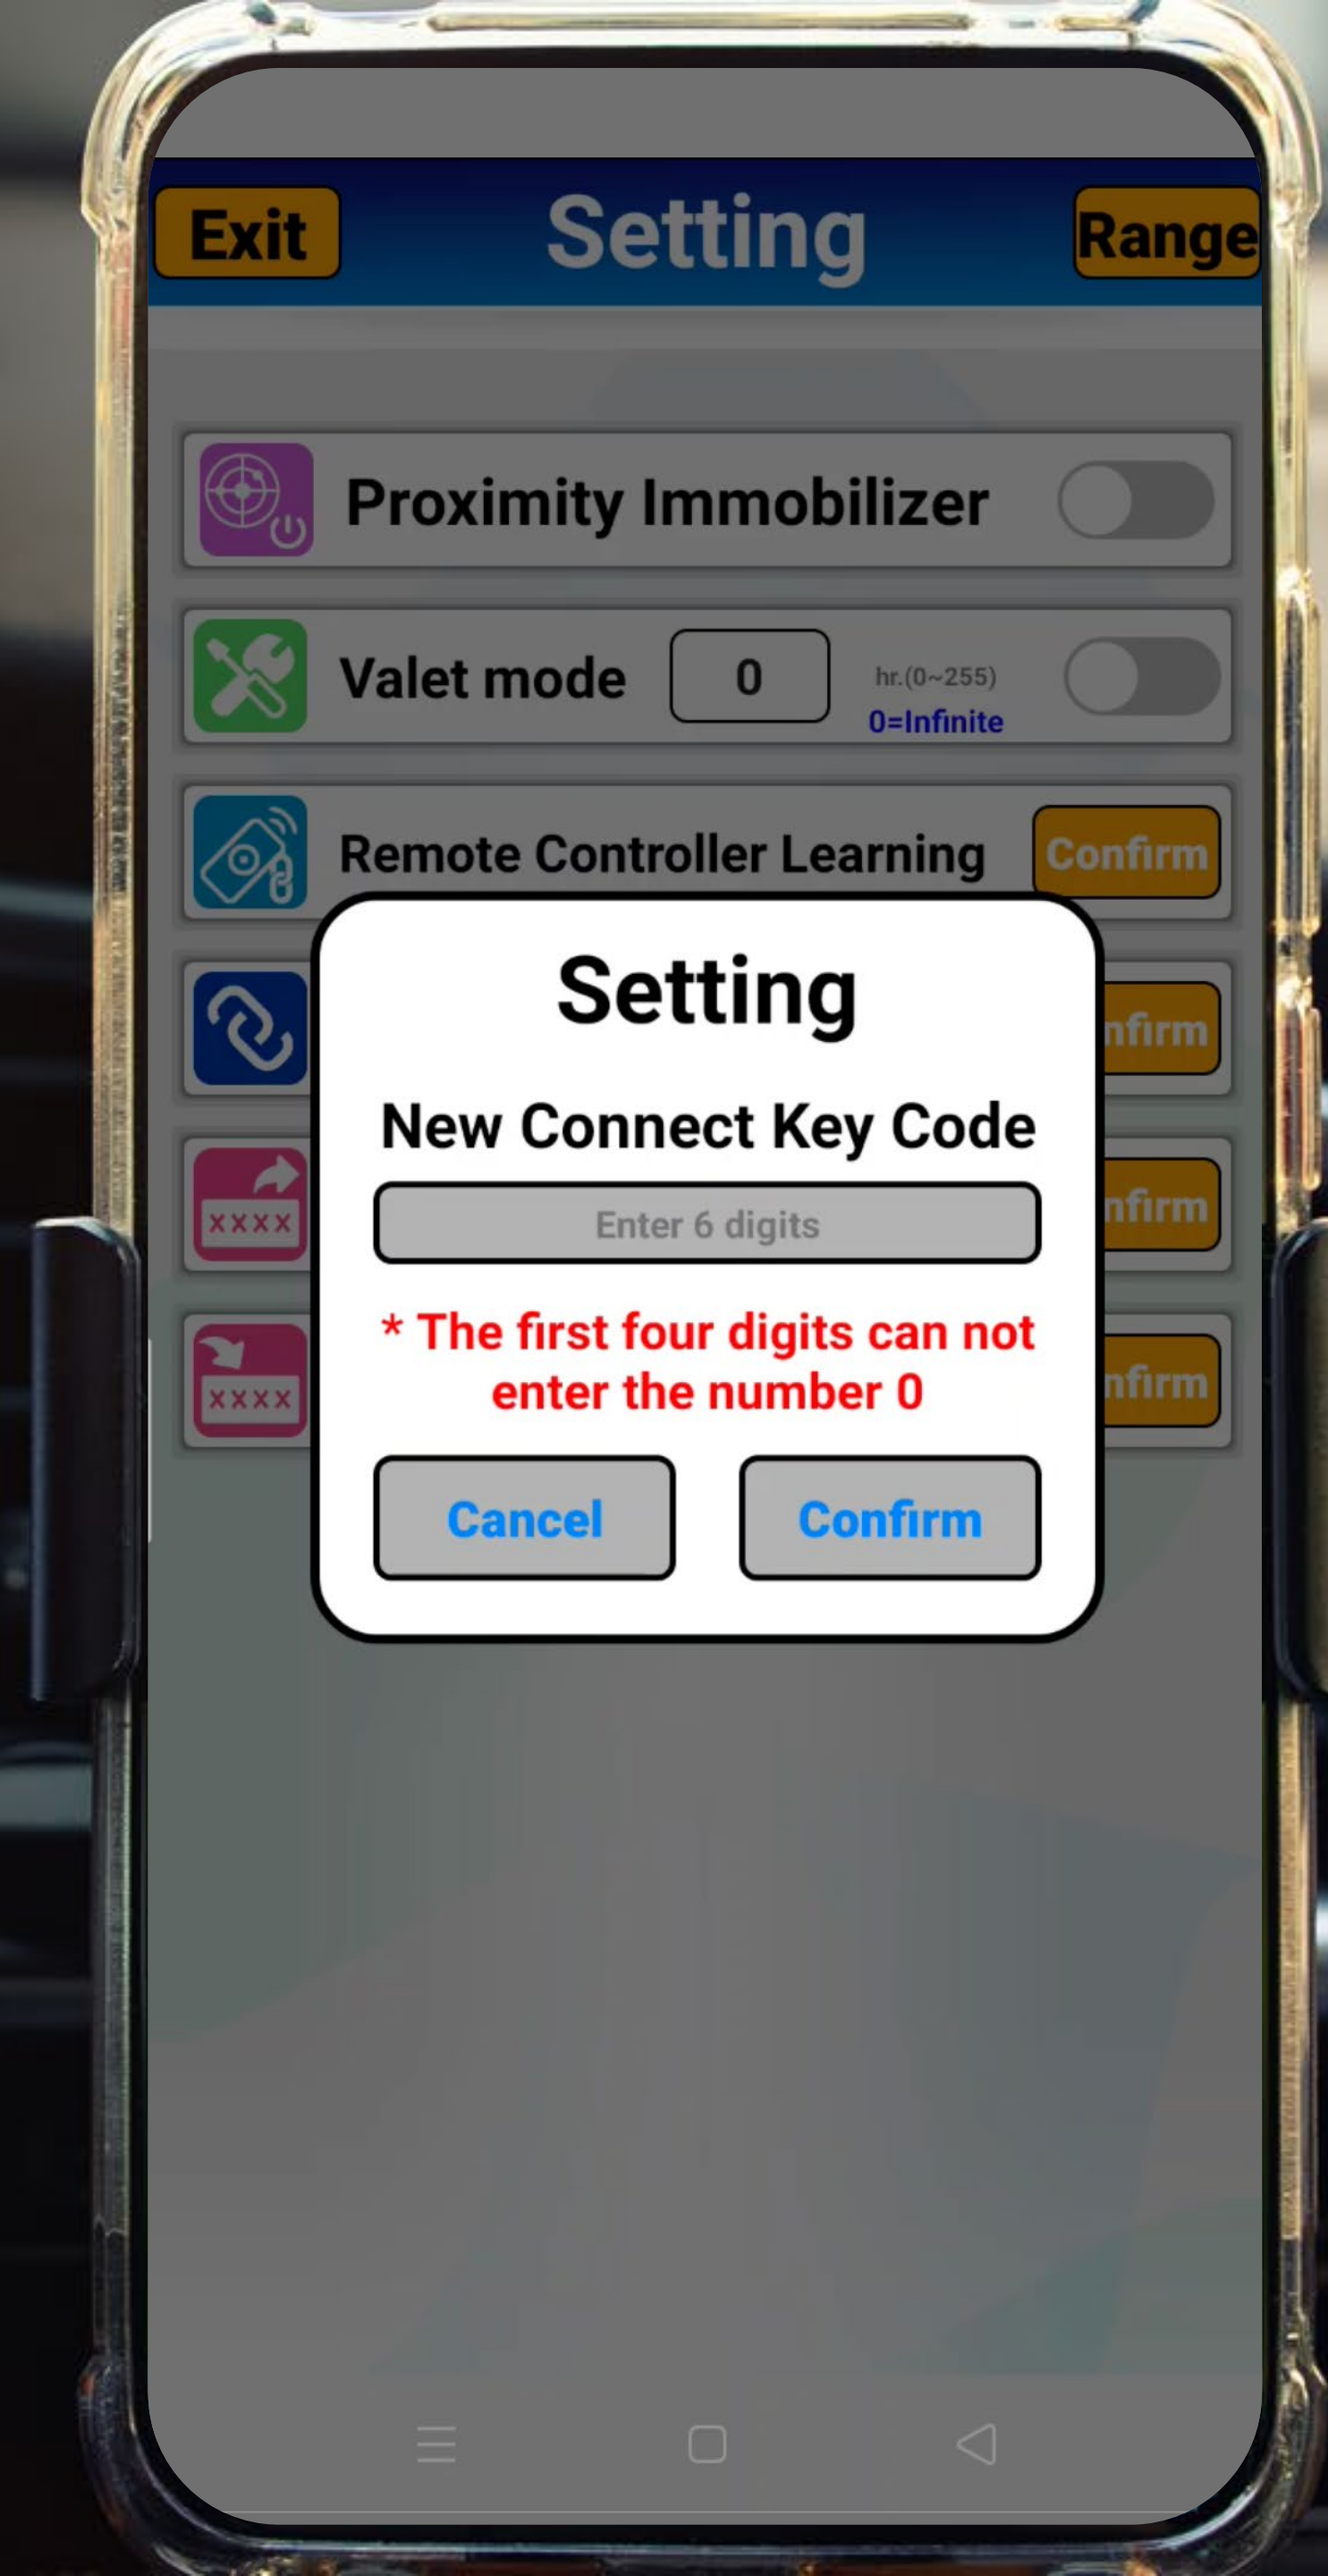




CUSTOMISE

APPLE ONLY

- ☒ Press the bottom right settings icon 
- ☒ Select 'Change Key Code'

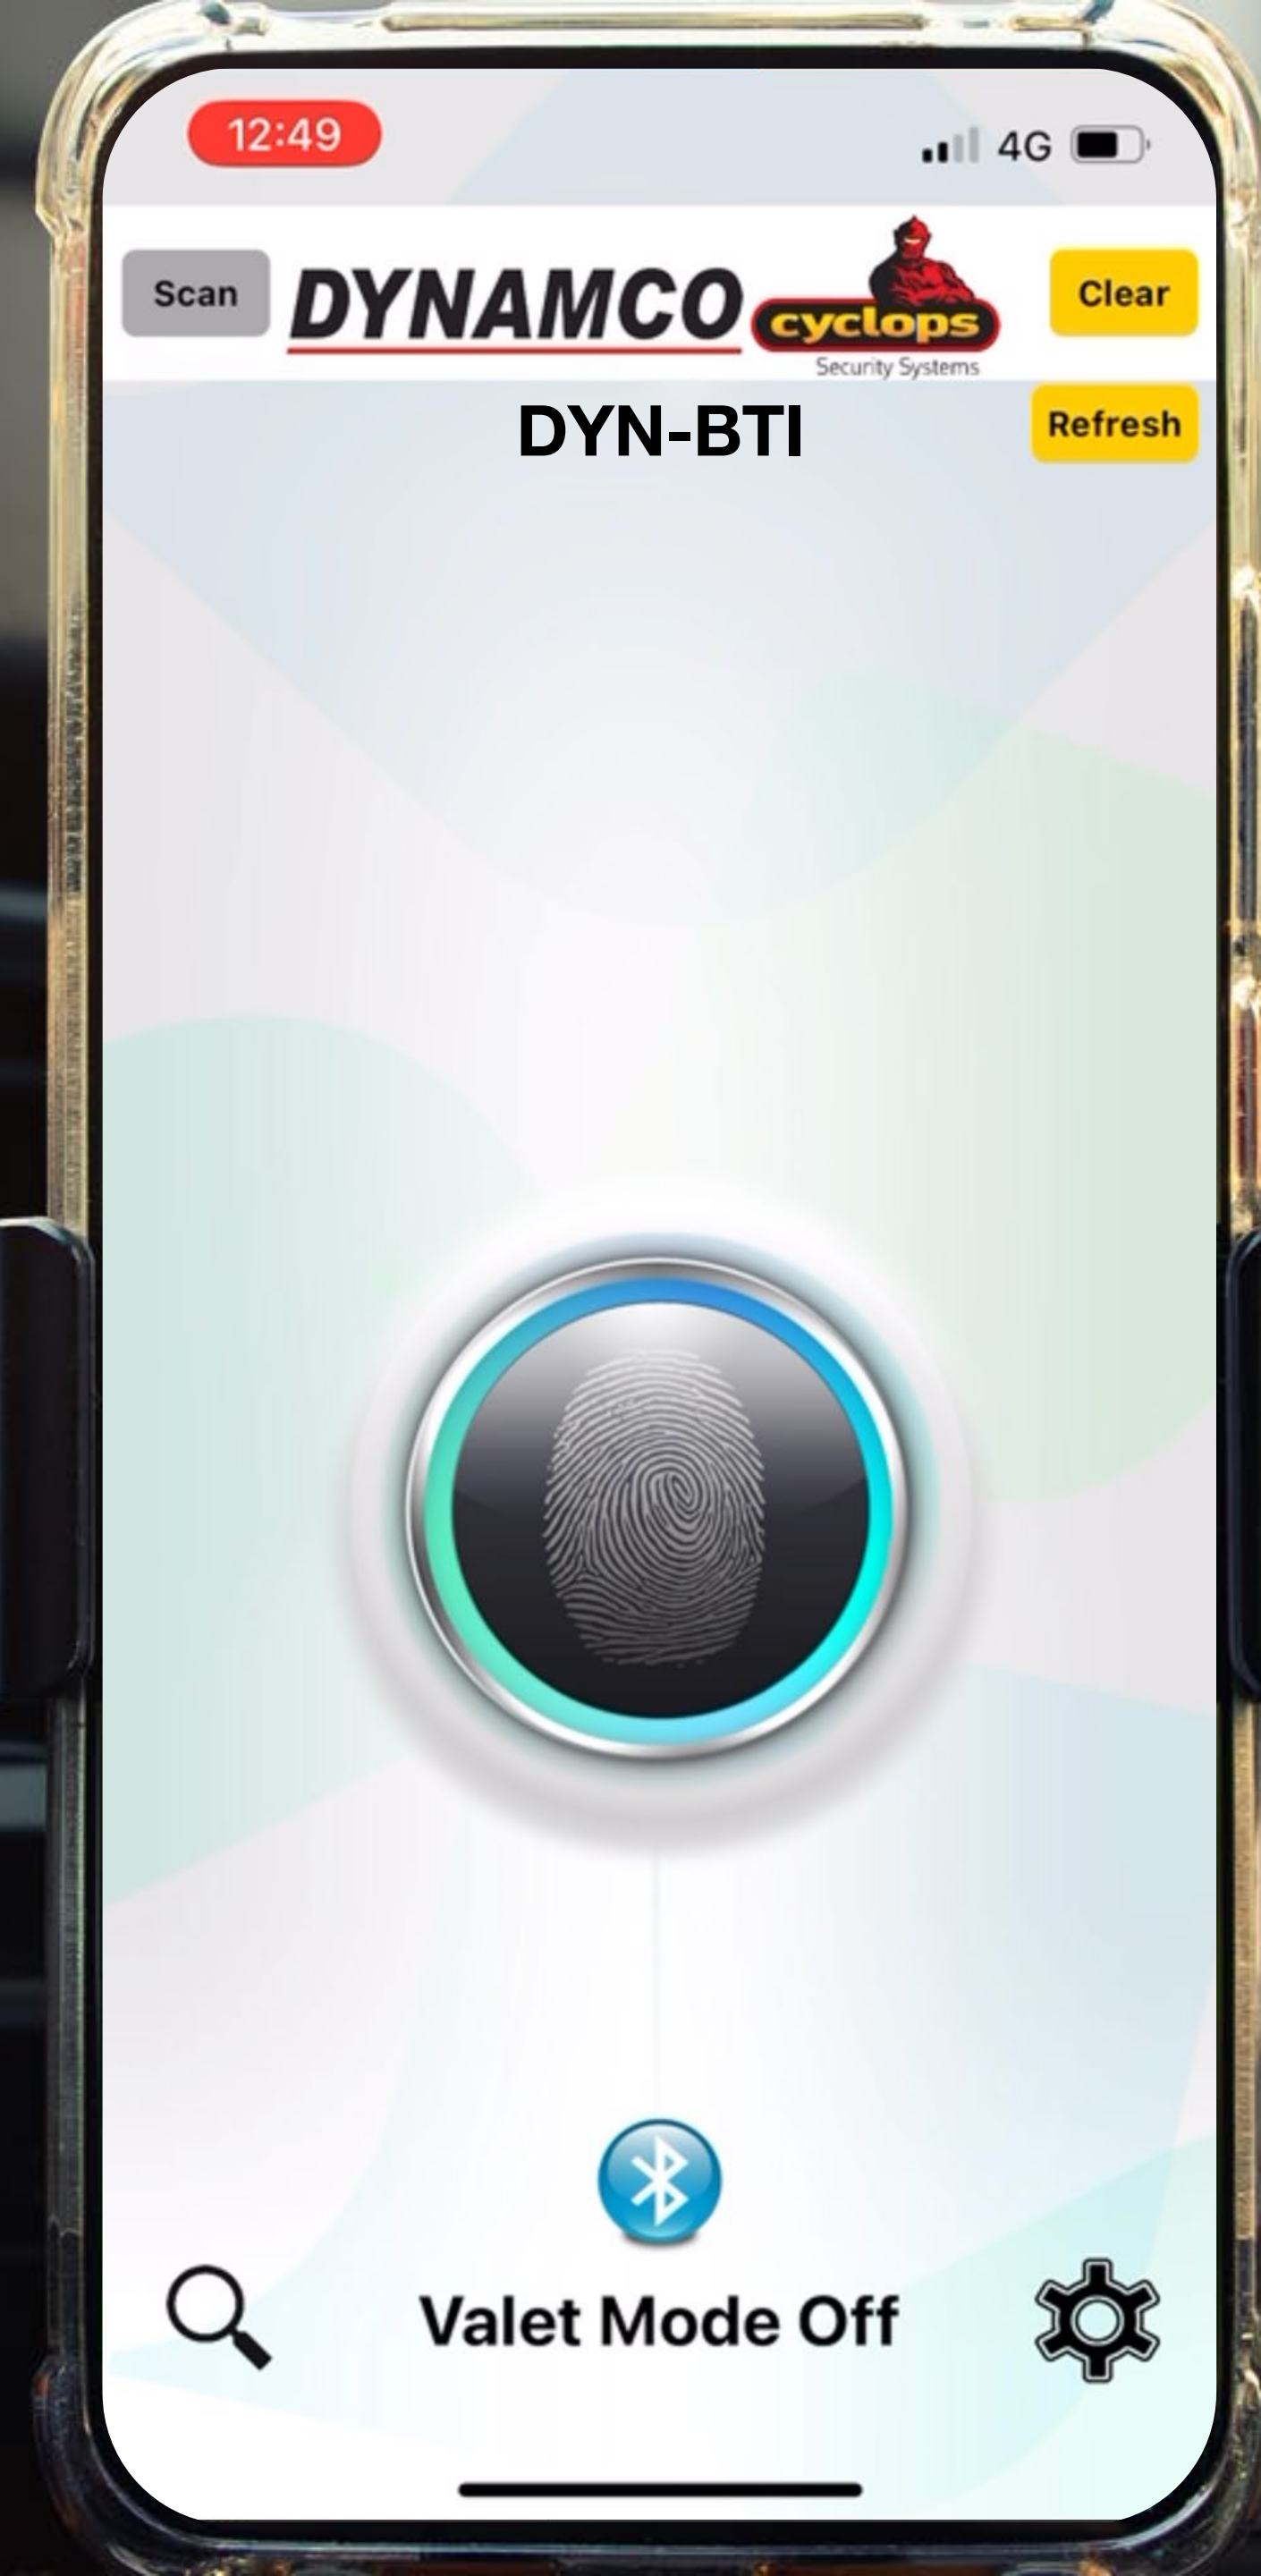




CUSTOMISE

APPLE ONLY

- ✓ Press the bottom right settings icon ⚙️
- ✓ Select 'Change Key Code'

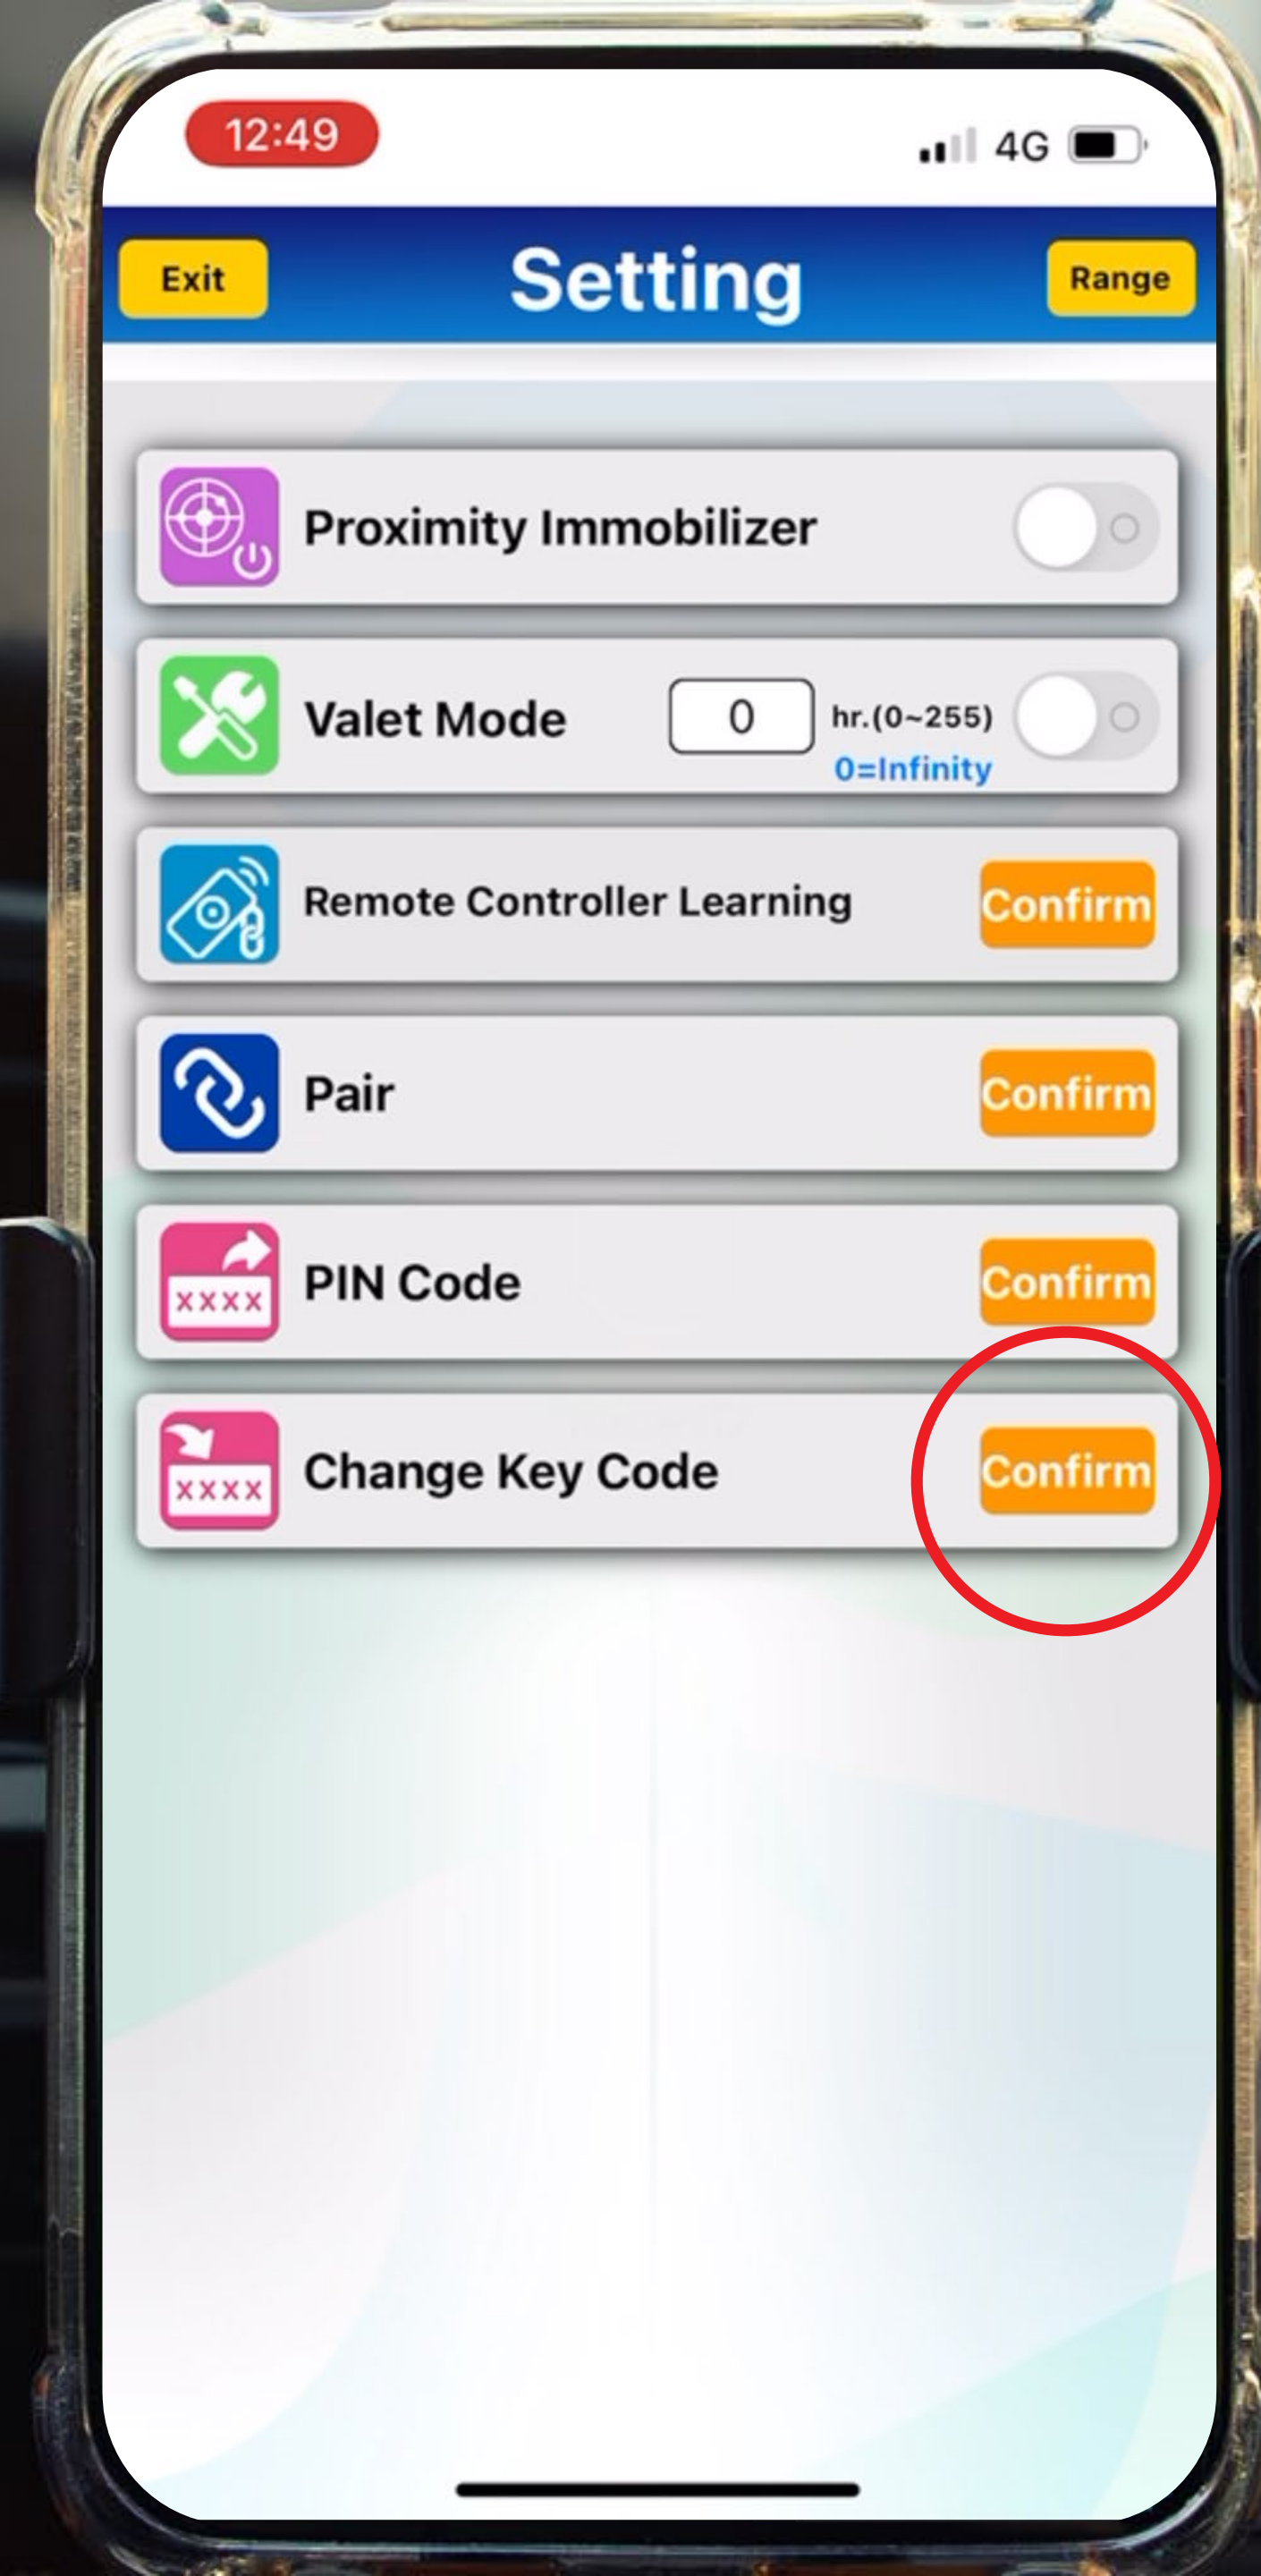




CUSTOMISE

APPLE ONLY

- ✓ Update your New Connect Key Code. PIN must be 6-digits numeric only.
- ✓ Store your New Connect Key Code in a safe place for future use.

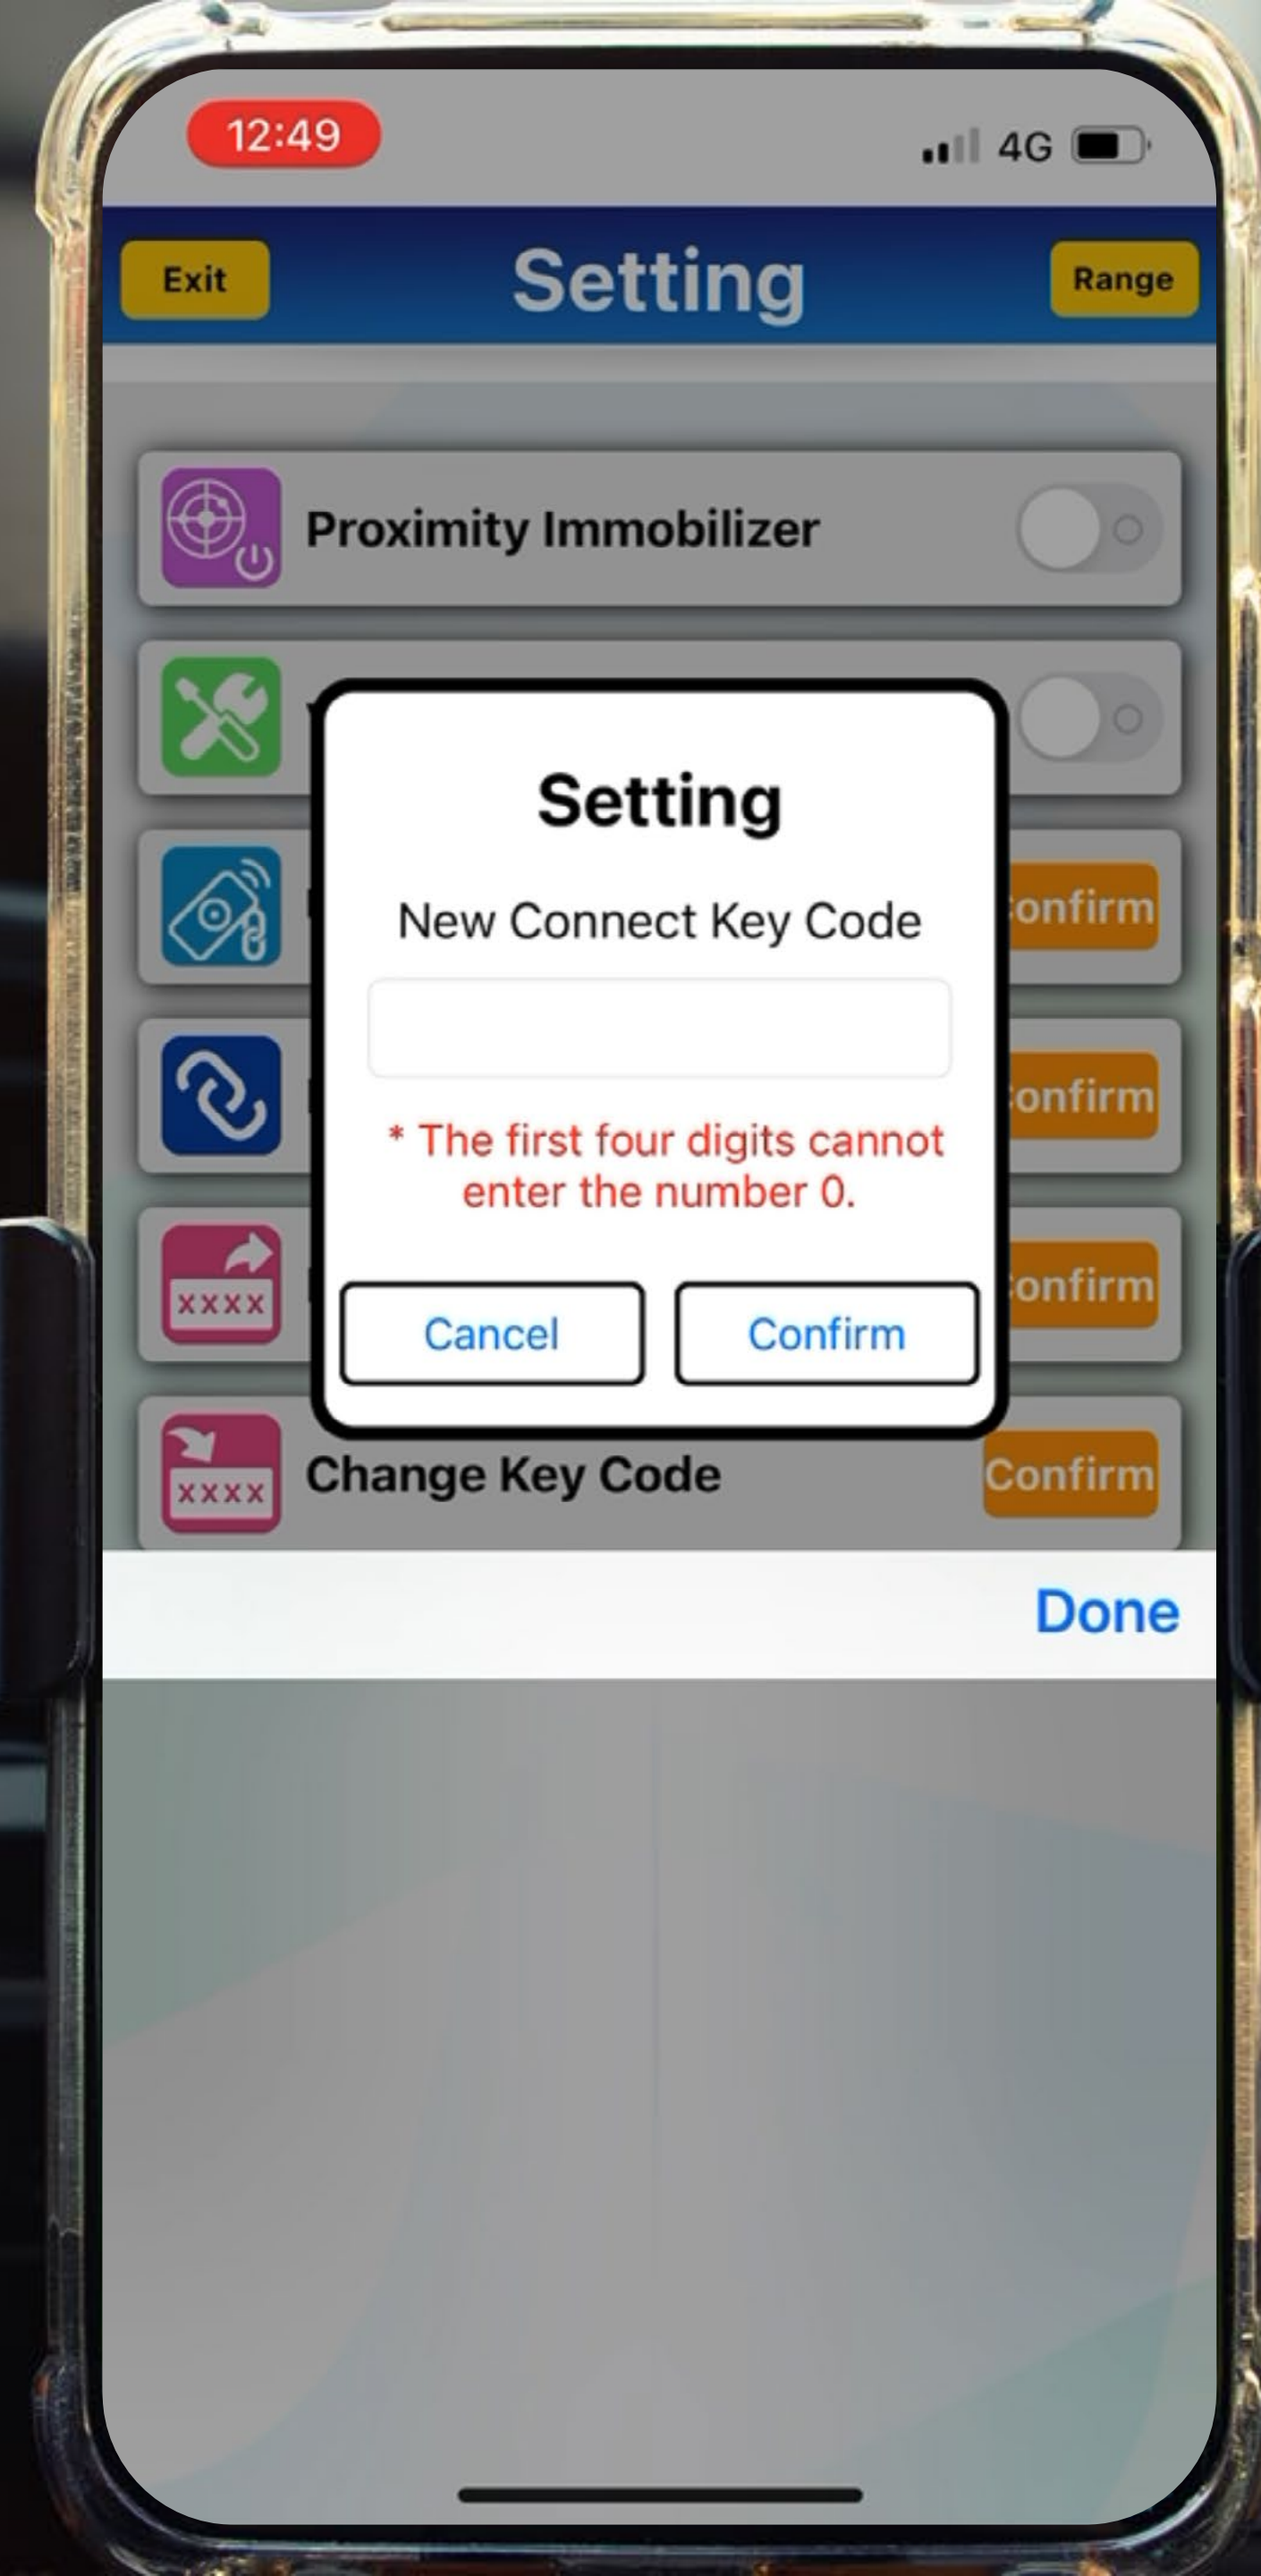




NOTE

APPLE & ANDROID

While in settings  page on App we recommend turning Proximity Immobiliser option to ON, this enables user to disarm BTI when walking to the vehicle without App open on the Phone, i.e. passive disarm of BTI.

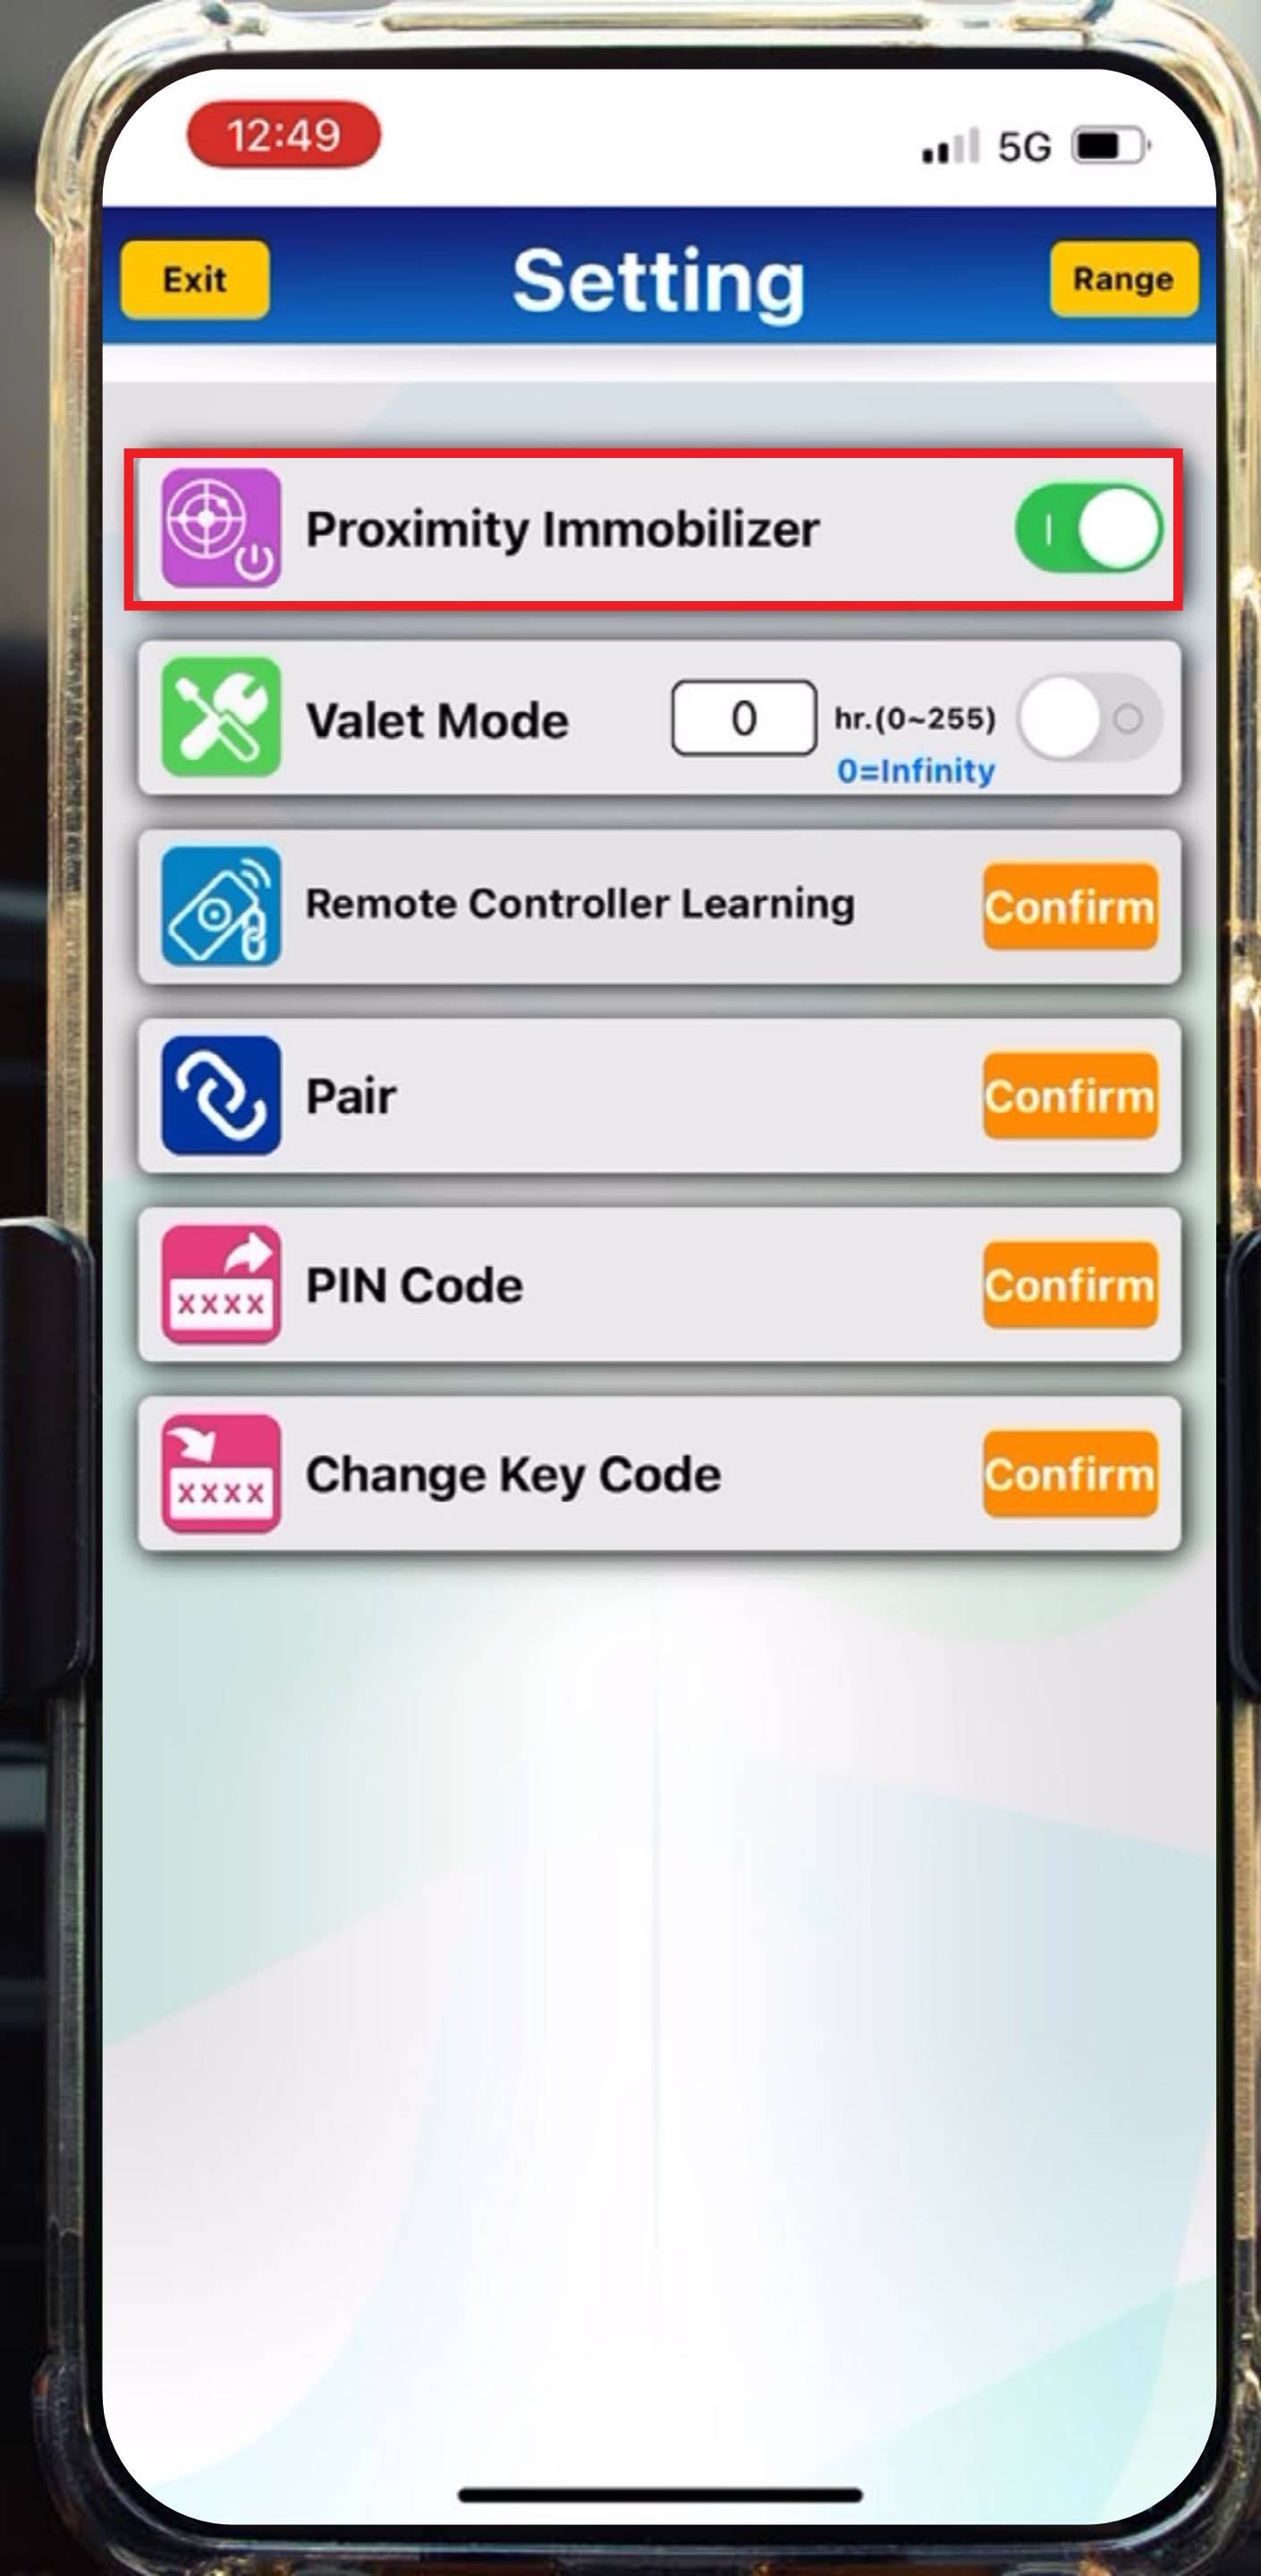




NOTE

APPLE & ANDROID

User can also then set passive disarm range with Range icon top right of App.

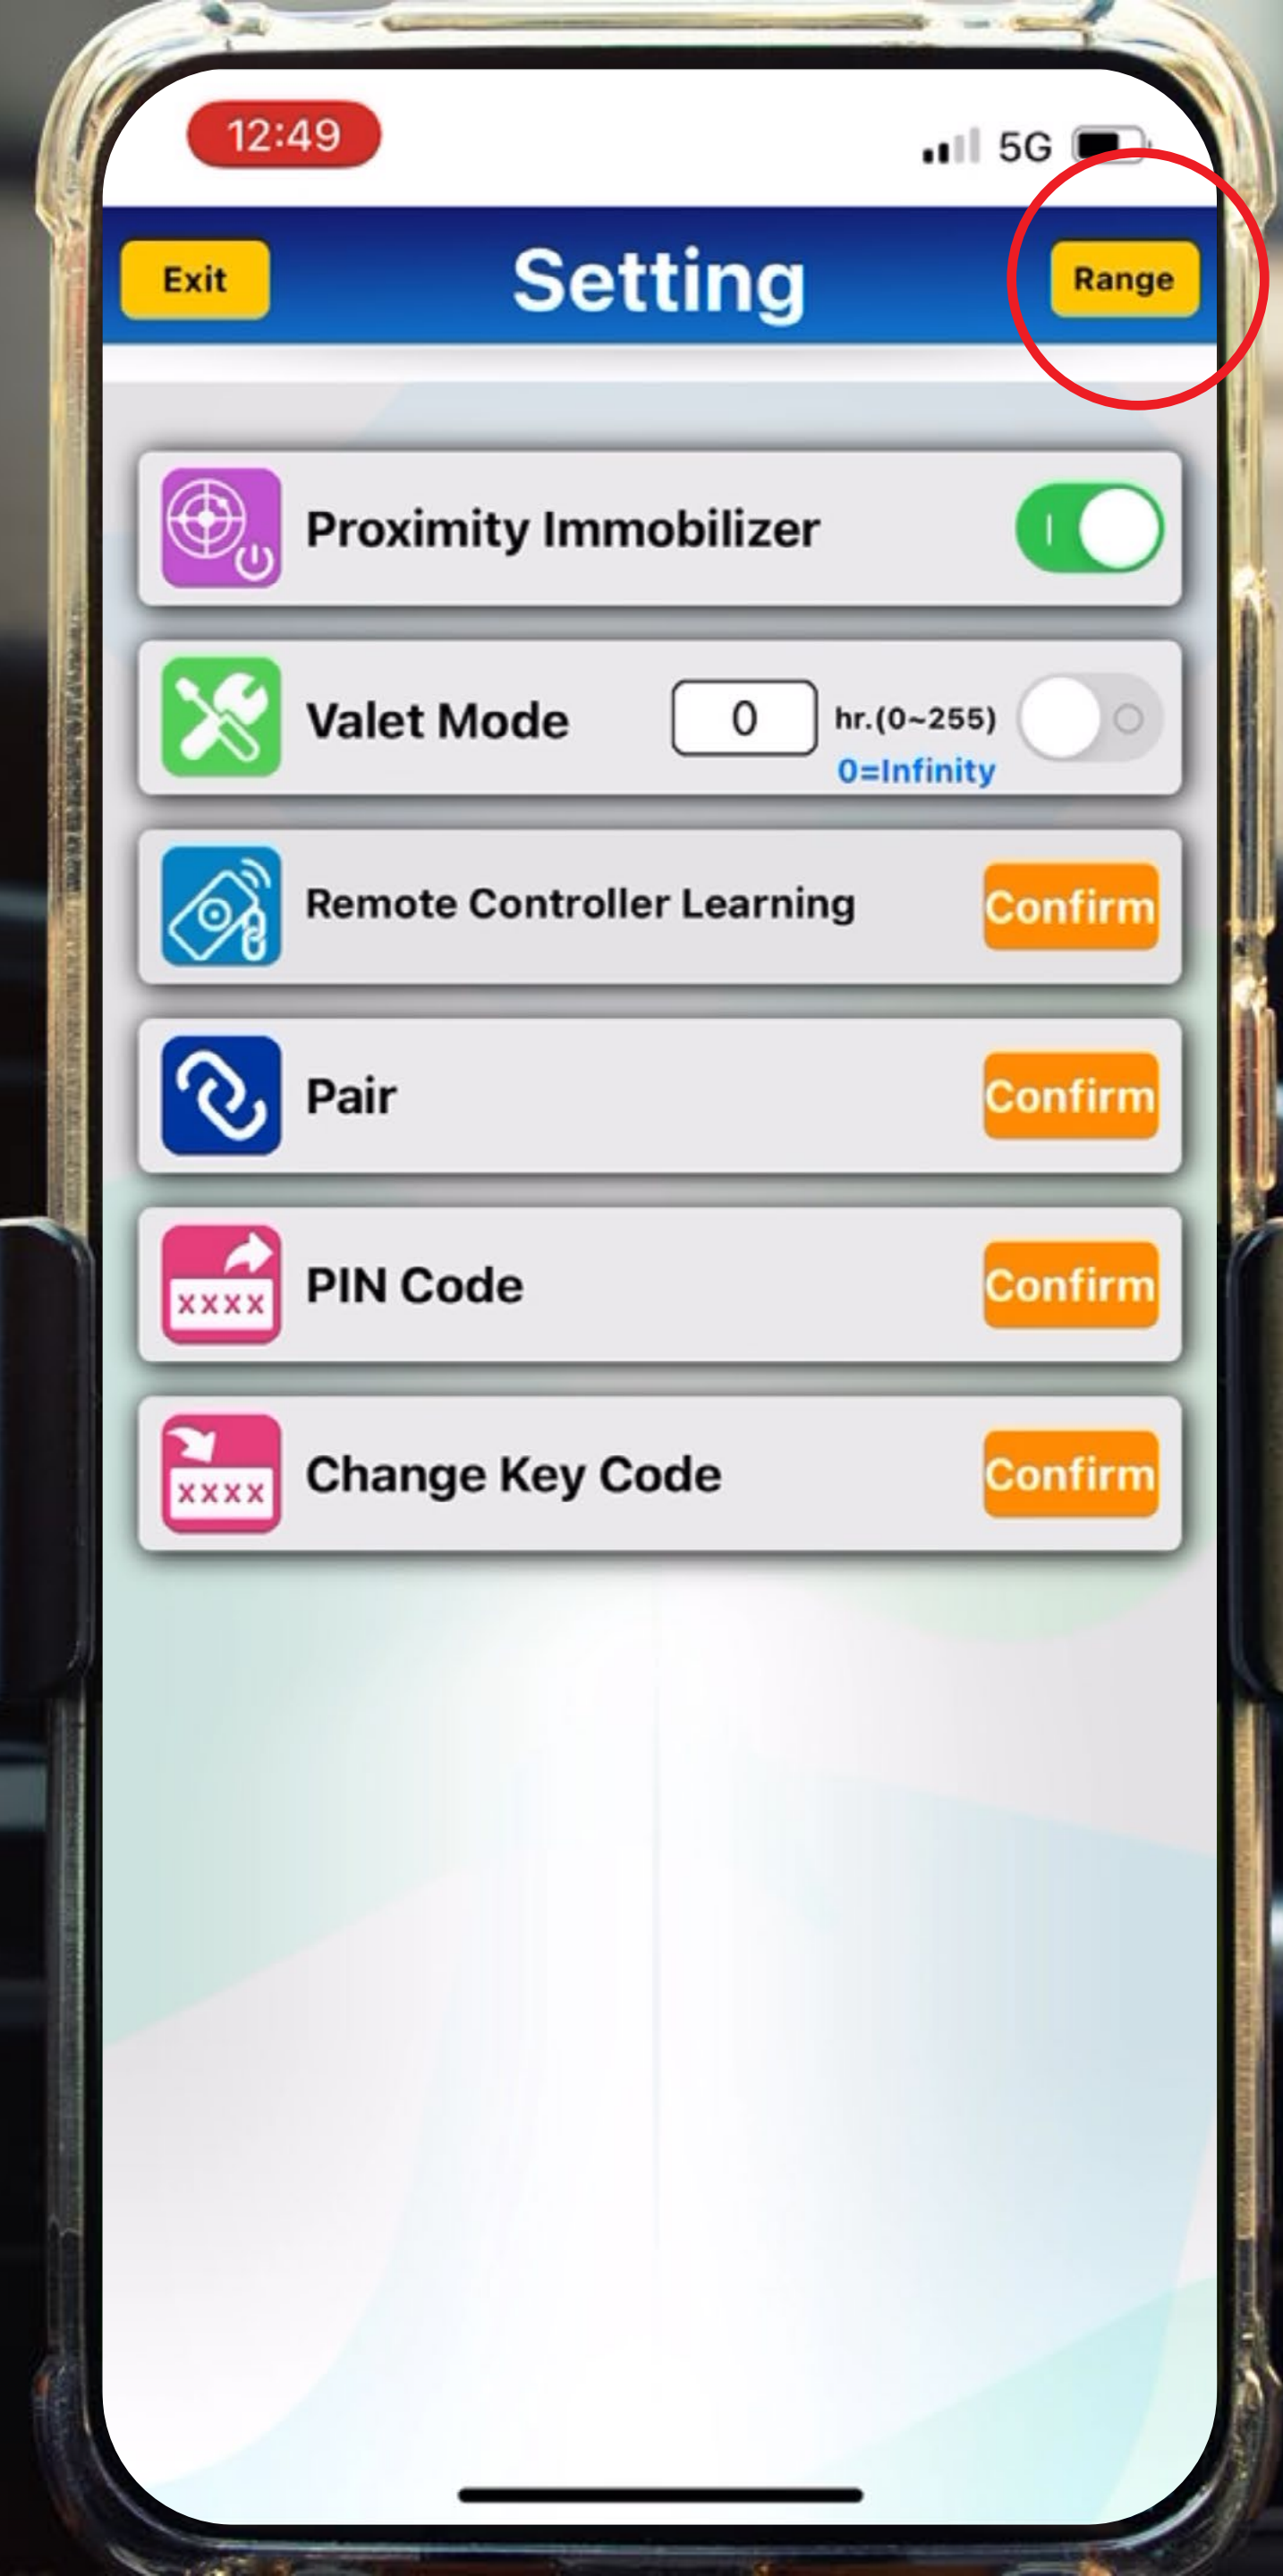




NOTE

APPLE & ANDROID

If Proximity Immobiliser is not selected on Settings page Face I.D. Finger Scan and or Passcode is always required to disarm the BTI.

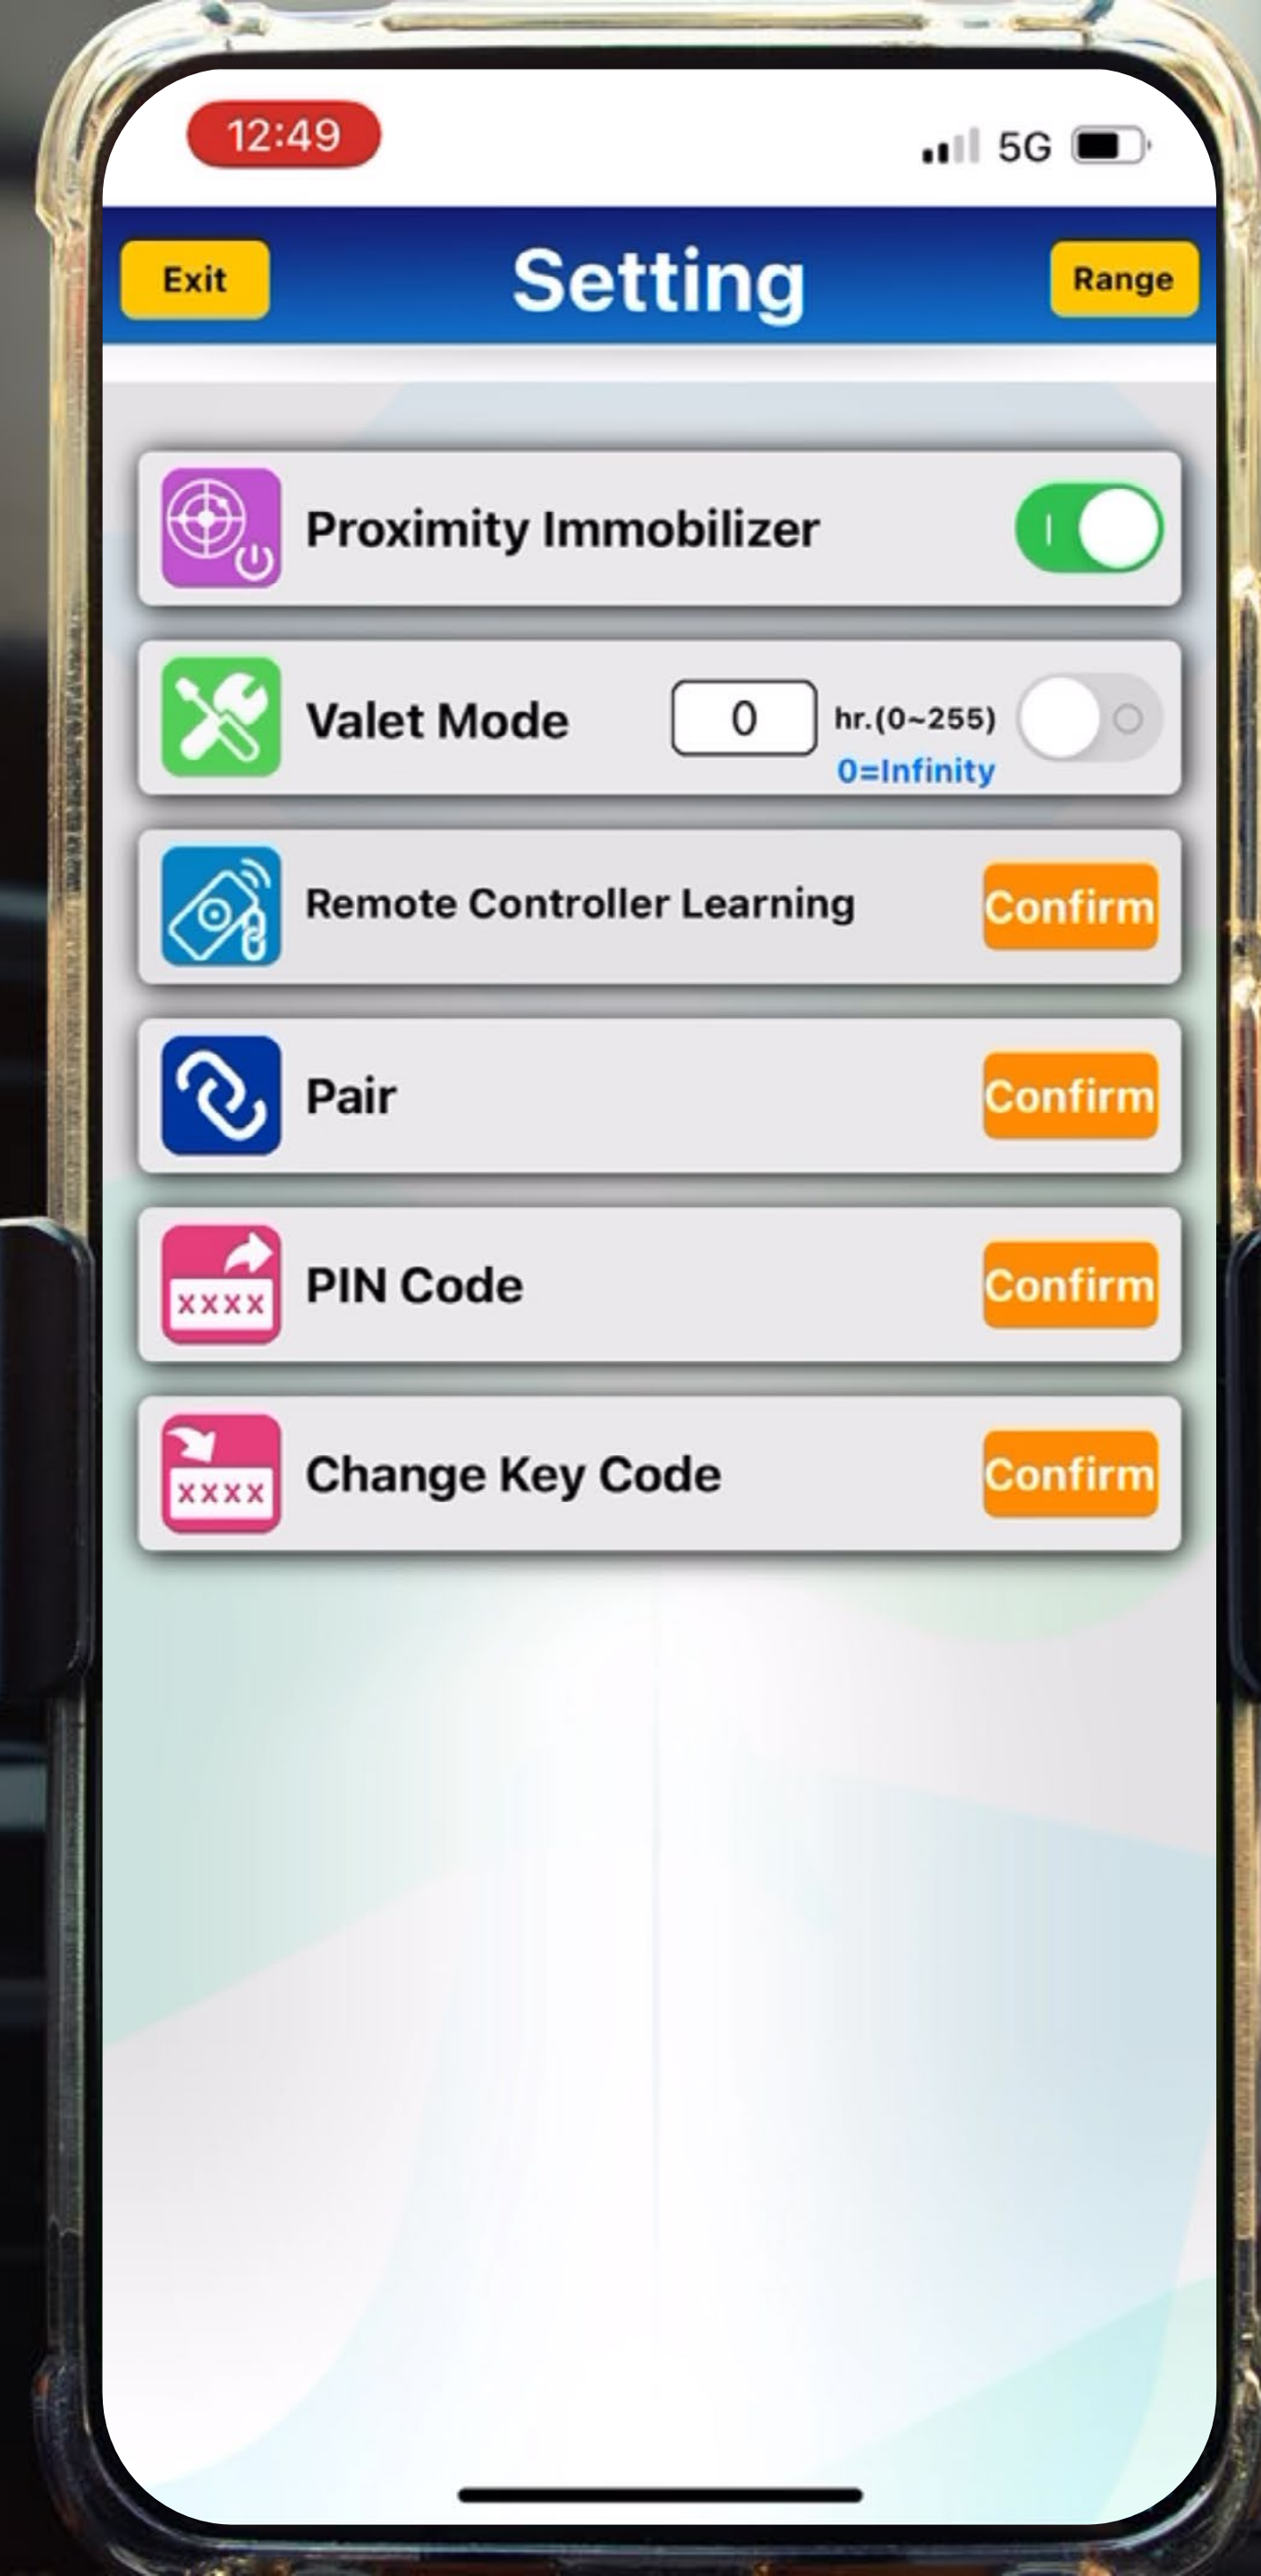



PROGRAMMING EMERGENCY OVERRIDE REMOTE






STEP 1

APPLE & ANDROID

- ✓ With ignition on, press 'Remote Control Learning'. BTI will give 3 beeps.
- ✓ Within 2 seconds press remote button. BTI will give 1 beep to confirm remote is now paired.

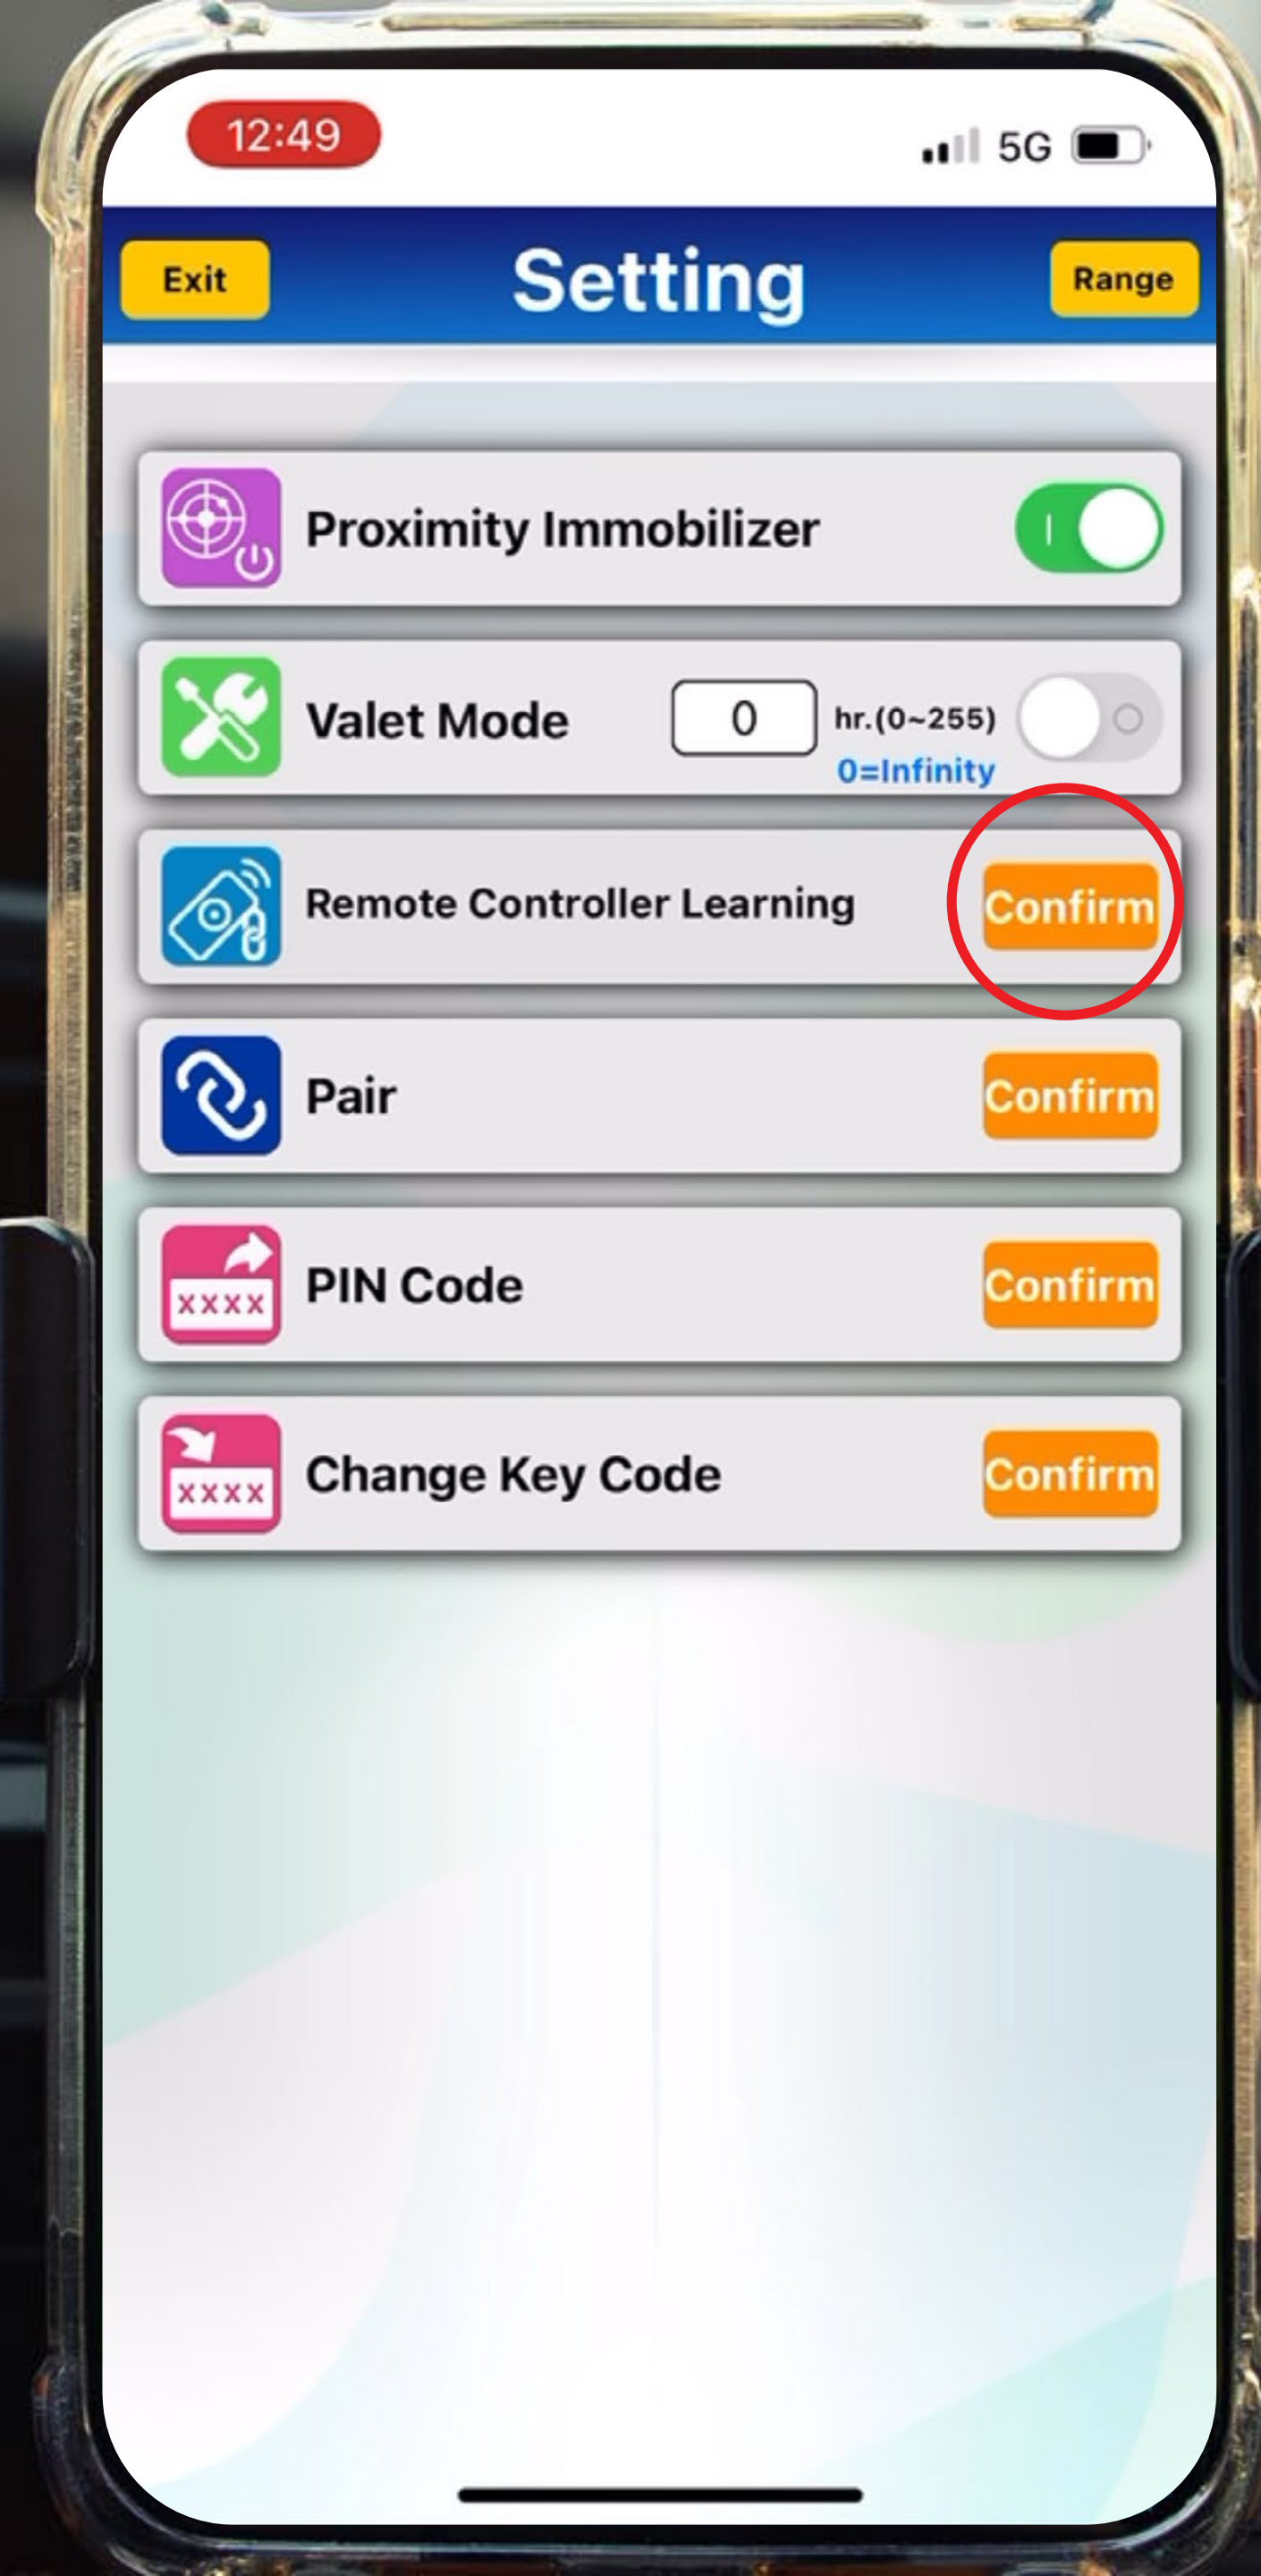



NOTE

APPLE & ANDROID




We recommend this Remote remain concealed in the vehicle and away from these instructions, should you choose to leave the instructions in the vehicle.





ACTIVATING VALET MODE

APPLE & ANDROID

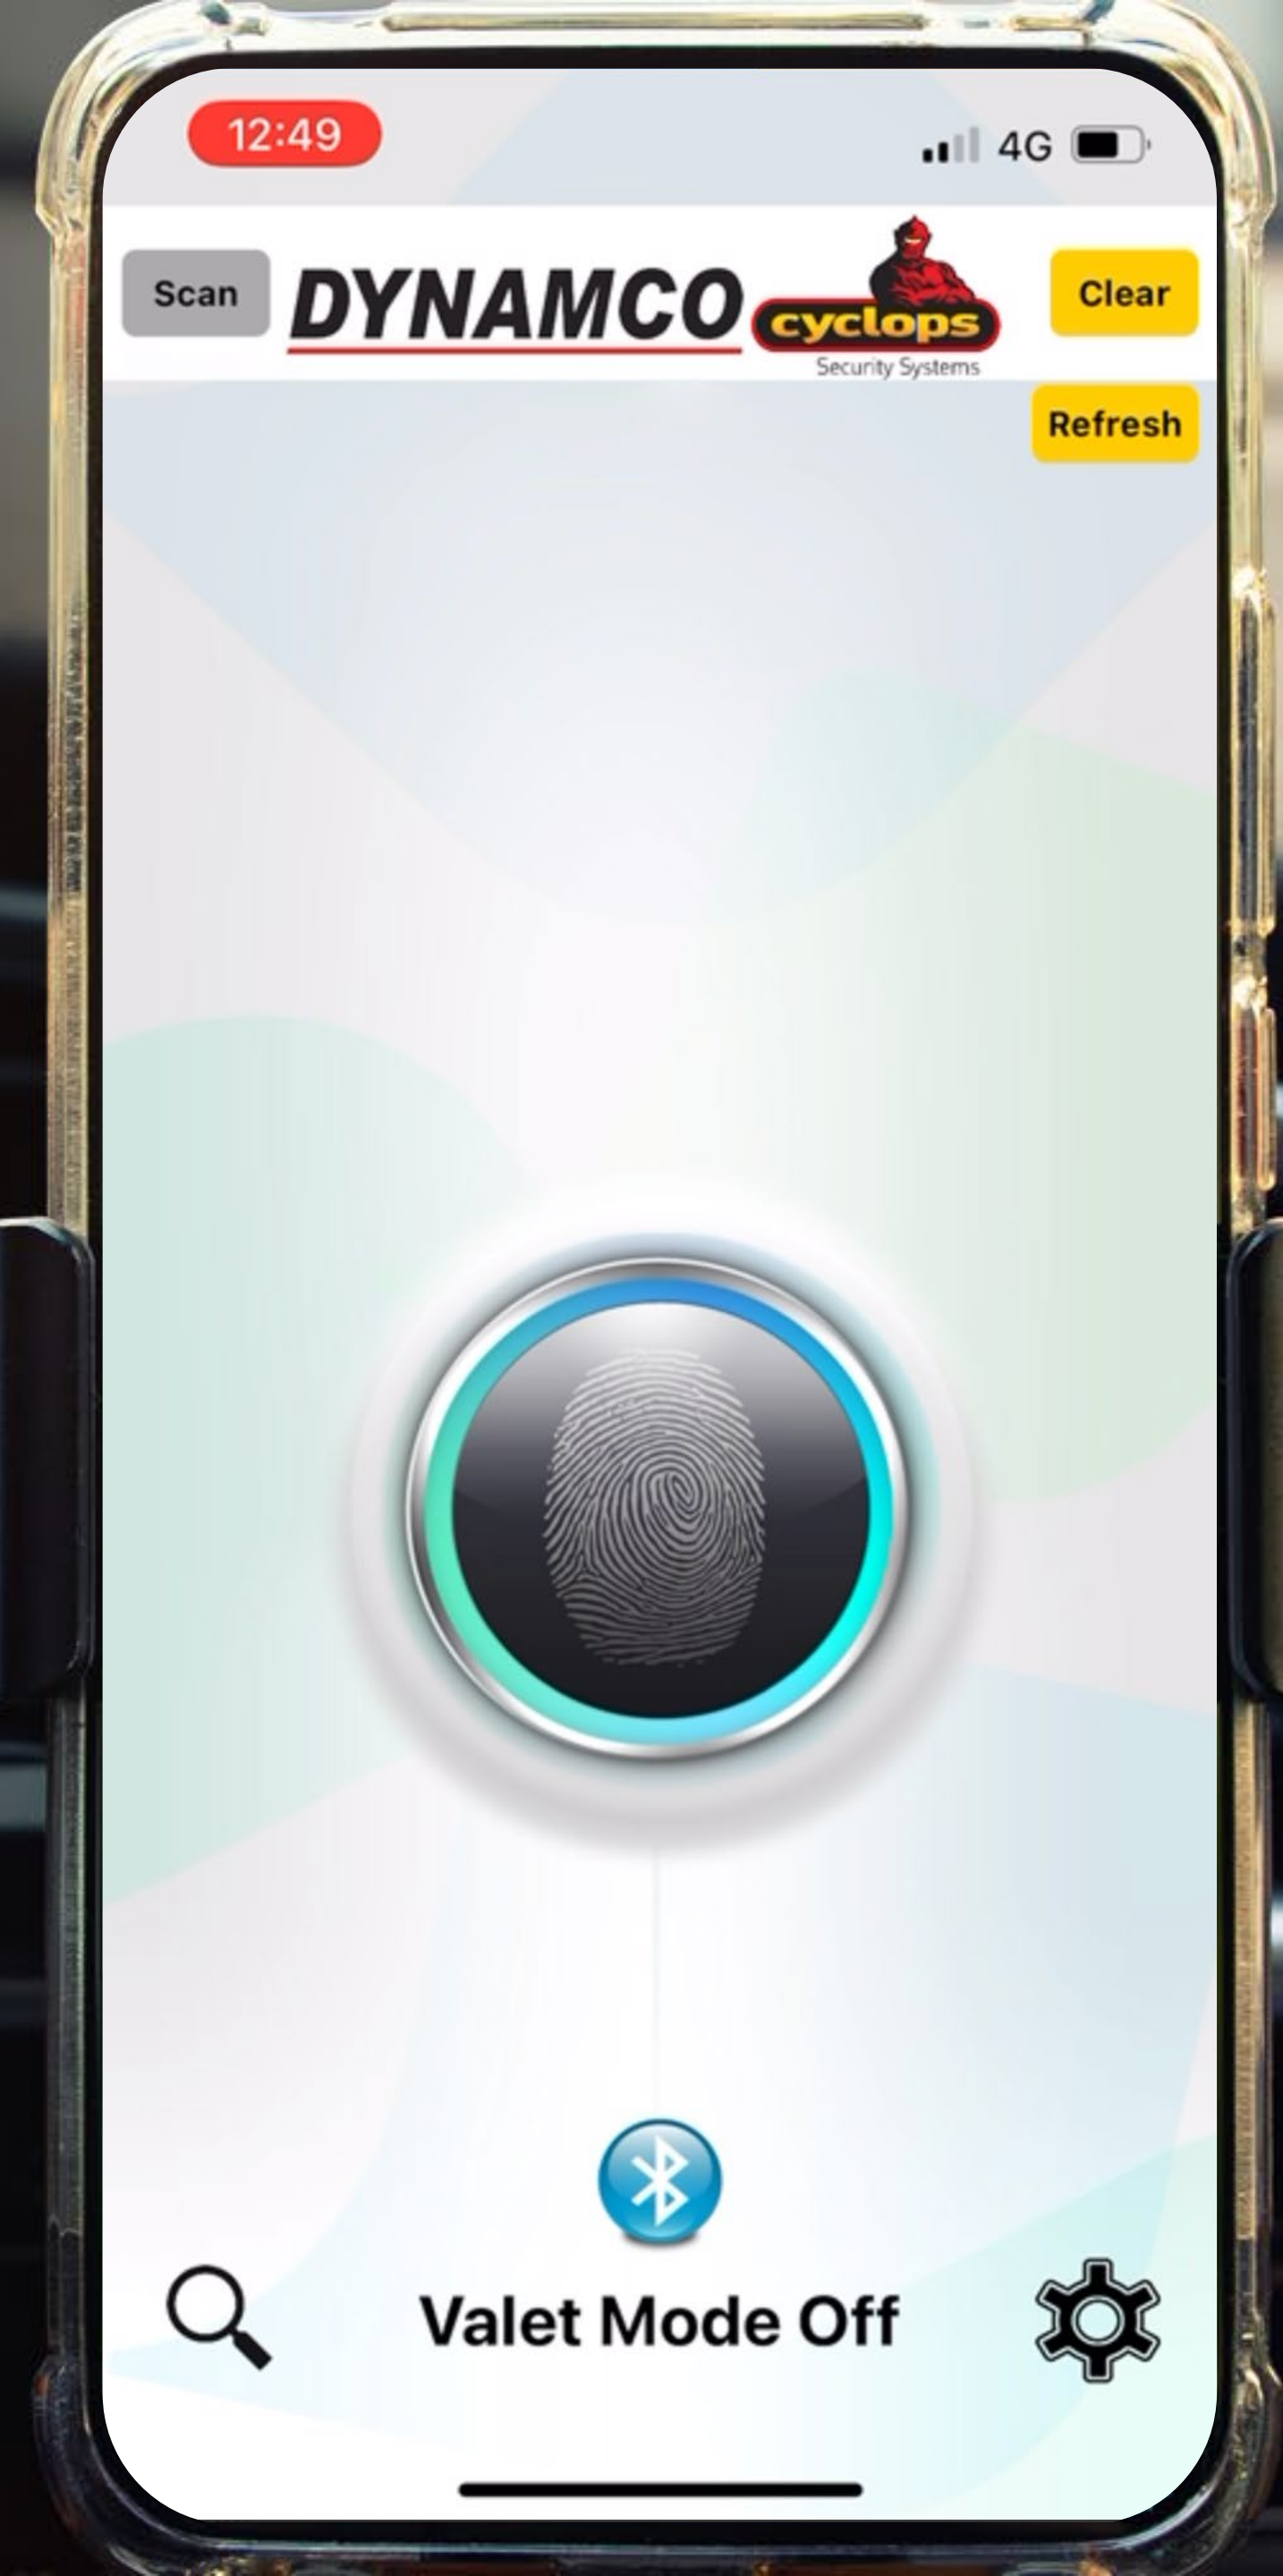




STEP 1

APPLE & ANDROID

- ✓ In your BTI App go to settings page ⚙️
- ✓ Press Valet mode icon and enter the time from 1 to 255 hours, 0 = infinite

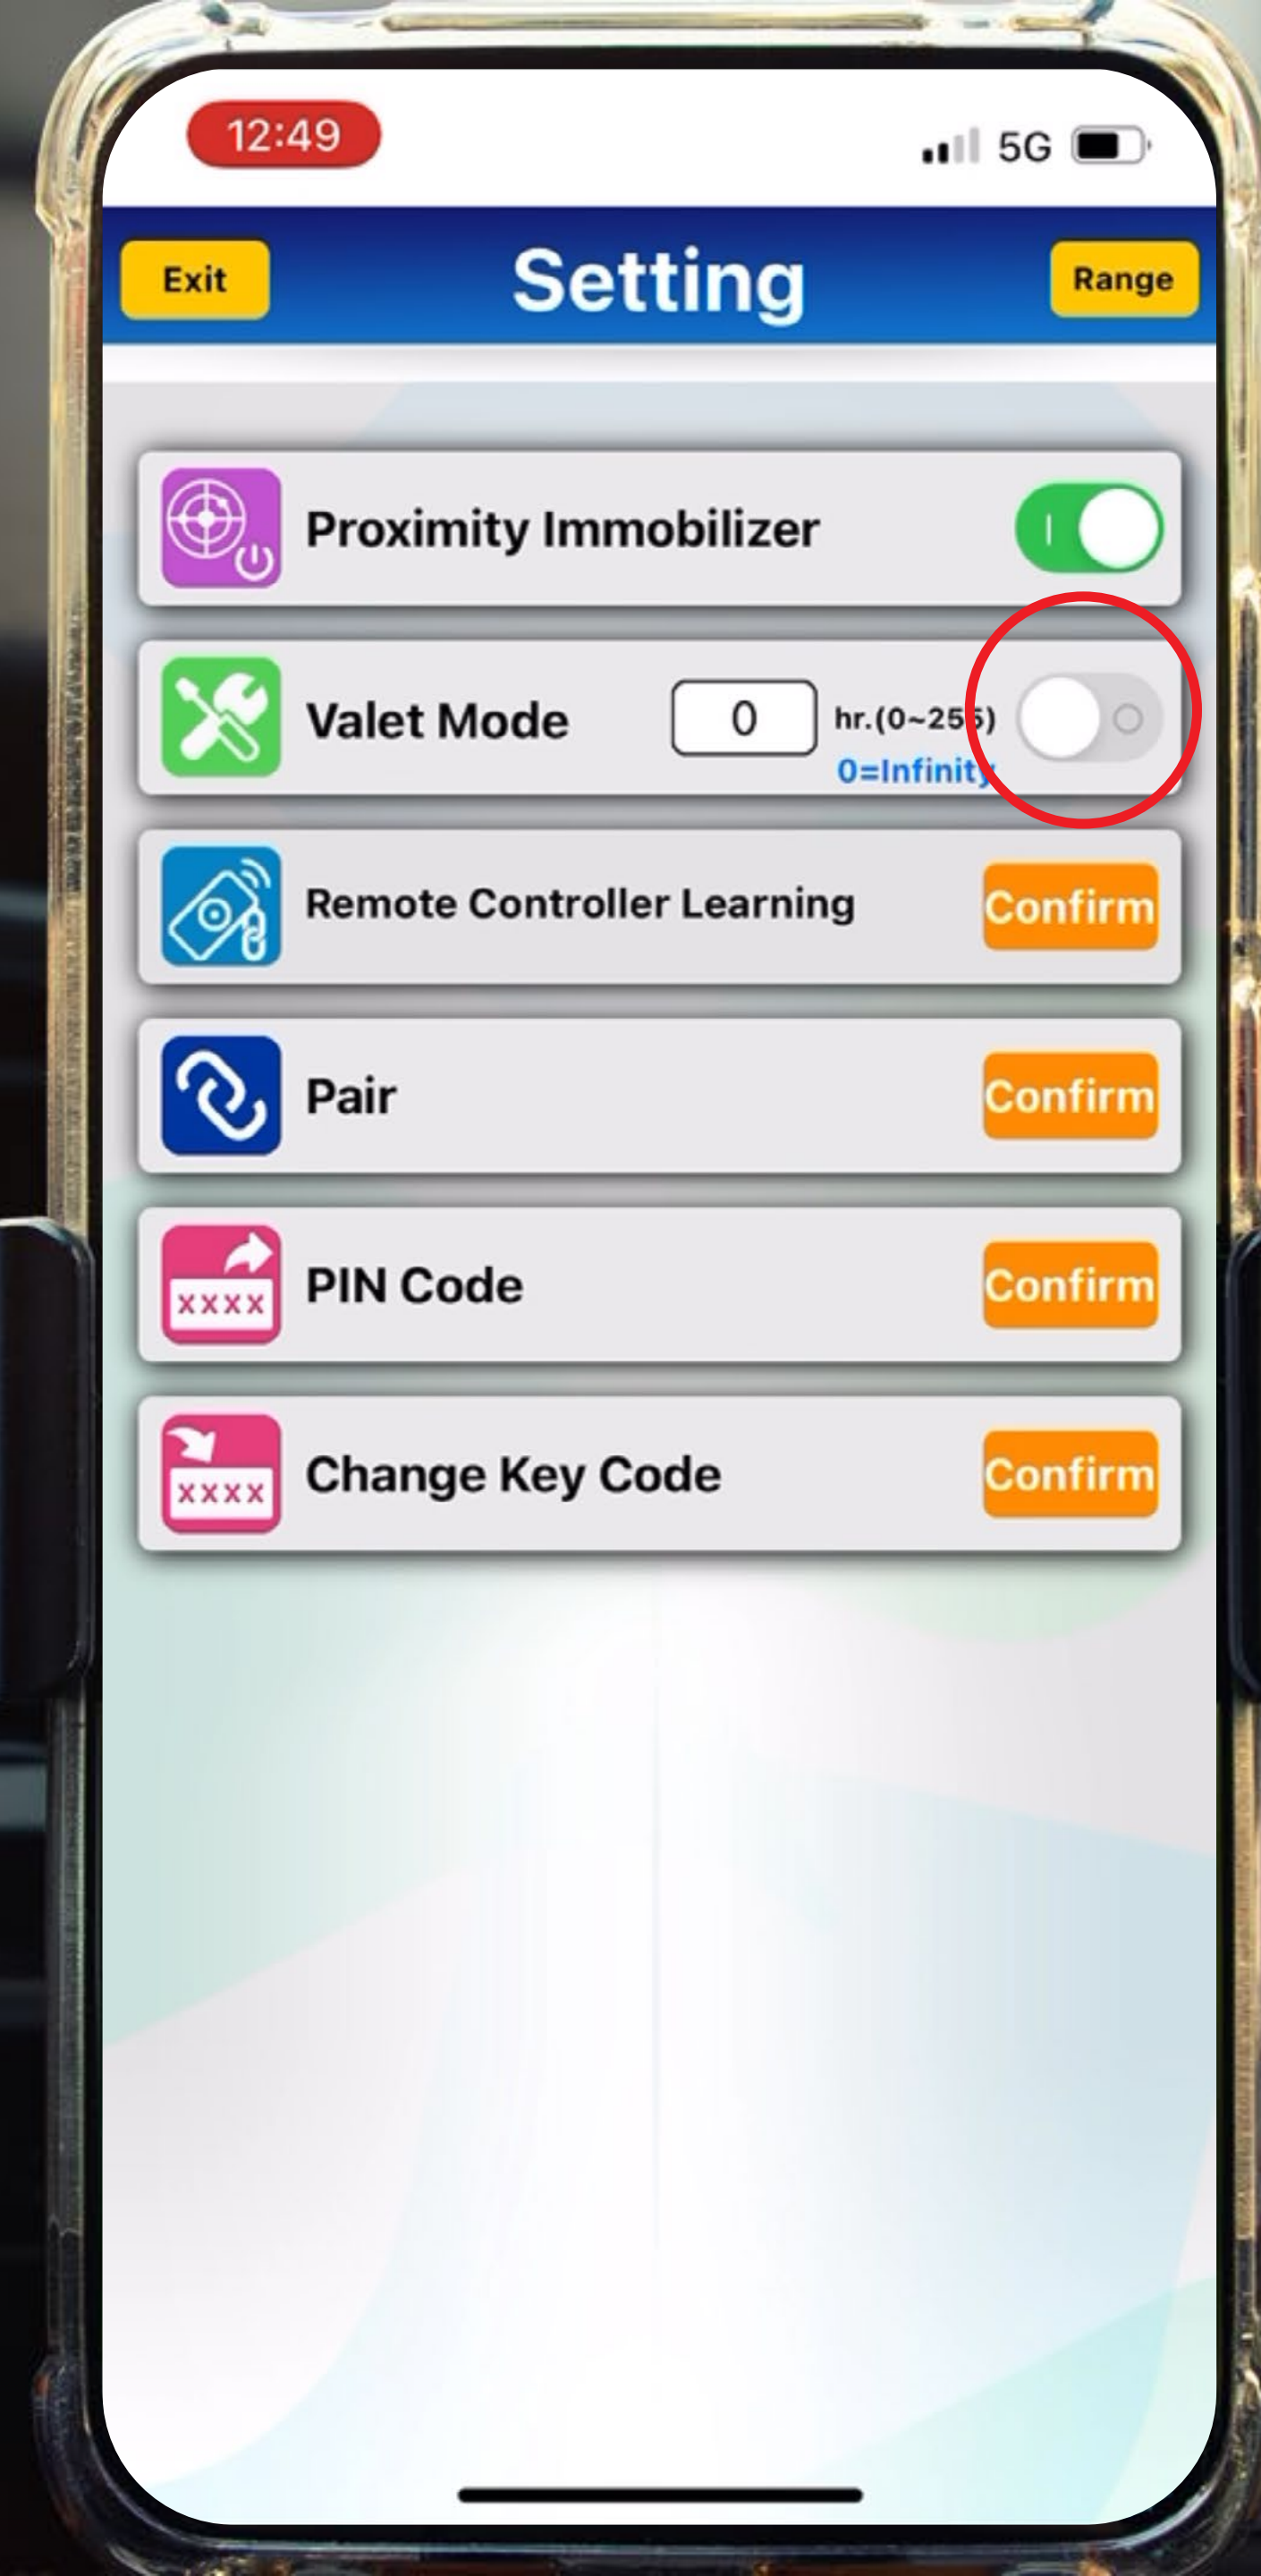




NOTE

APPLE & ANDROID

- ✓ “ON” or “OFF” status will be shown on bottom of main page APP.
- ✓ When you turn Valet OFF, please reinstate Proximity ON if it was set to ON before entering Valet

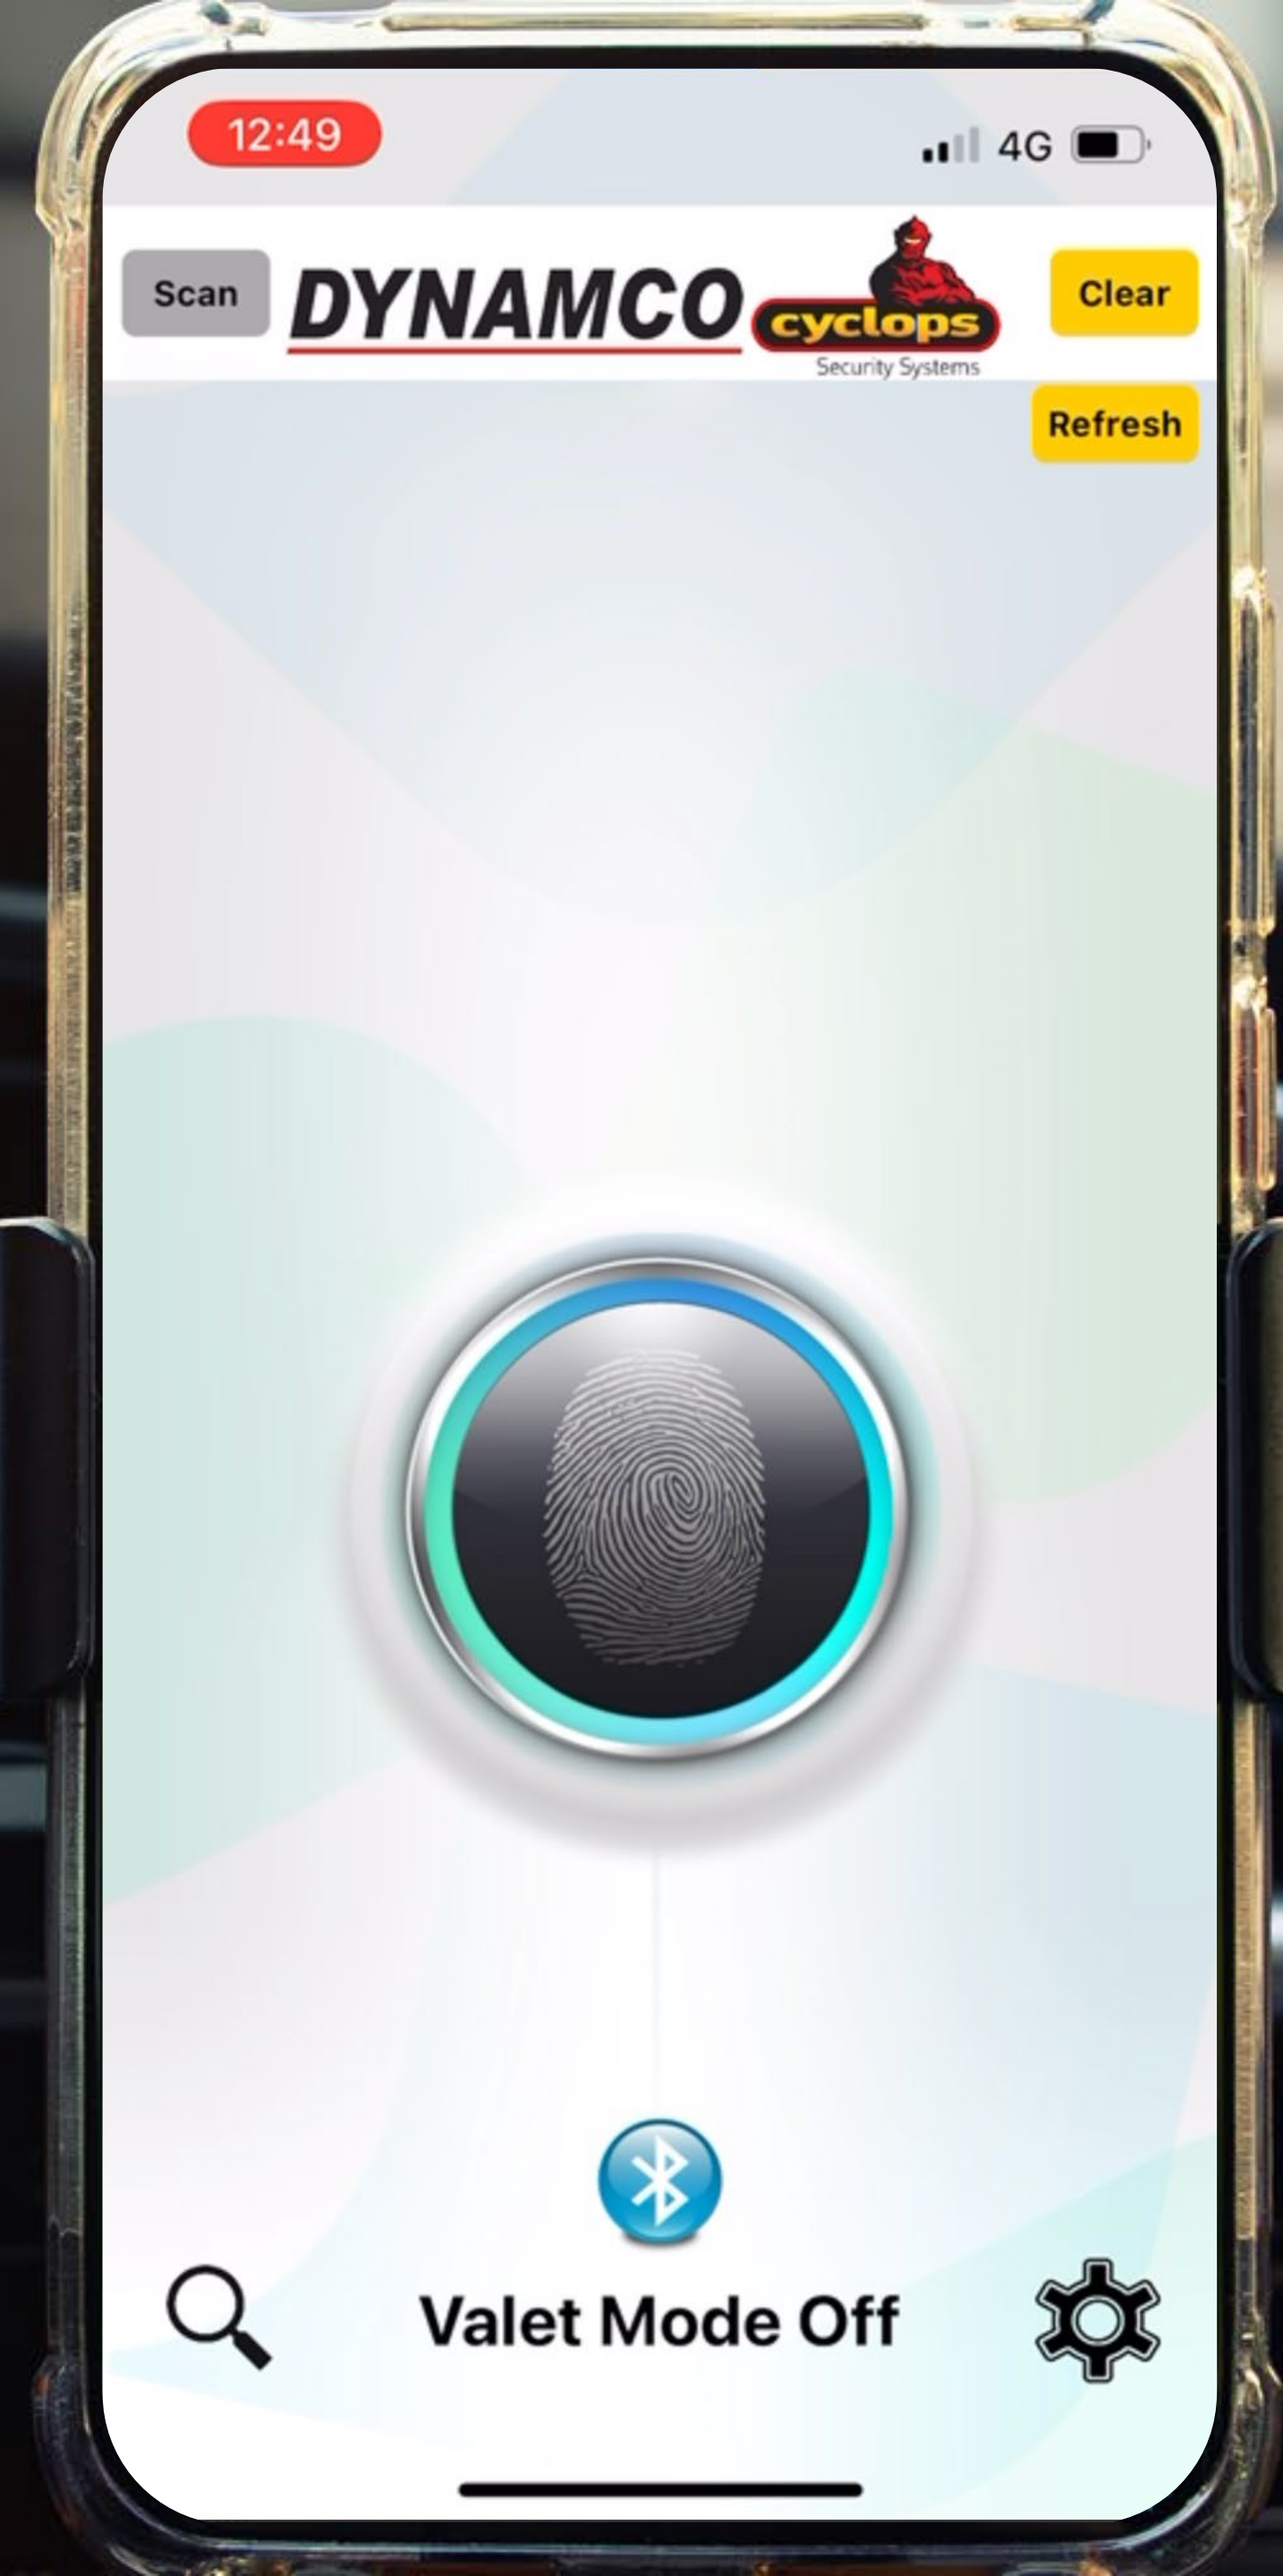

YOU'RE SET!



SECURITY SYSTEMS

