

PARALYSER BTI INSTRUCTIONS & PHONE PAIRING CHECKLIST



SECURITY SYSTEMS



CONGRATULATIONS!

Congratulations on the purchase of your Bluetooth Immobiliser (BTI). Please read these important tips and information to ensure ease of operation and answer any questions you may have.

It is critical Bluetooth, Finger Scan, Passcode and or Face Recognition in Settings on your Smart Phone are turned on. Background App Refresh in Phone settings must also be on. Please also make sure you keep and remember your PIN for the BTI. Your PIN is also available on the settings page of your App.



PARALYSER BTI INSTRUCTIONS





DISARMING PARALYSER BTI


- ✓ In your BTI App go to settings and turn on Proximity Immobilizer.
- ✓ With Proximity Immobiliser on, disarming the BTI will be passive when you approach the vehicle, the BTI will emit two beeps when disarmed, you may hear these beeps if you are in the vehicle when it disarms.

- ✓ With Proximity Immobiliser turned on you only need the BTI App running in the background of your Smart Phone.
- ✓ If you choose not to have Proximity turned on you will need to disarm the BTI manually via the app, either by face scan recognition, finger scan or your Phone Passcode.



ARMING PARALYSER BTI

- ✓ The BTI automatically arms 30 seconds after the ignition has been switched off and your connected Smart Phone is out of Bluetooth Range. The BTI will emit one beep to confirm the system is armed, if you are still in the vehicle when the system arms you may hear this one beep. While in the armed state the vehicle is Immobilised and in a “No Go” state.

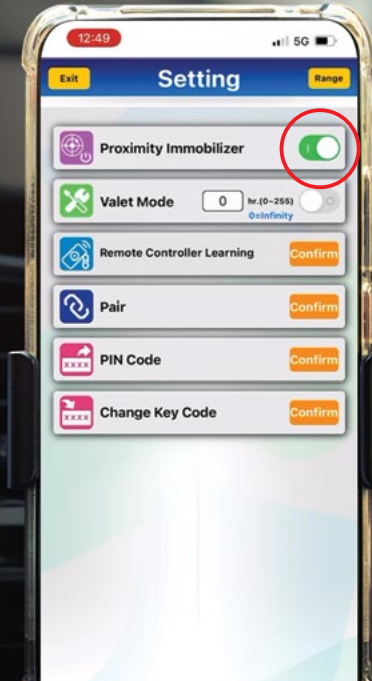

EMERGENCY OVERRIDE REMOTE


- ✓ Press and hold button for 3 to 5 seconds. System will sound 2 beeps. BTI will disarm for 30 seconds. You can now start your vehicle.
- ✓ This Remote is also ideal for drivers/users of your vehicle where the Bluetooth Paired Phone is not available.





PROGRAMMING EMERGENCY OVERRIDE REMOTE

- ✓ Open BTI App and go to settings.
- ✓ With ignition on, press and release 'Remote Control Learning Confirm' button. BTI will give 2 beeps.
- ✓ Press remote/s for 3-5 seconds to be paired. BTI will beep to confirm each Remote is paired.

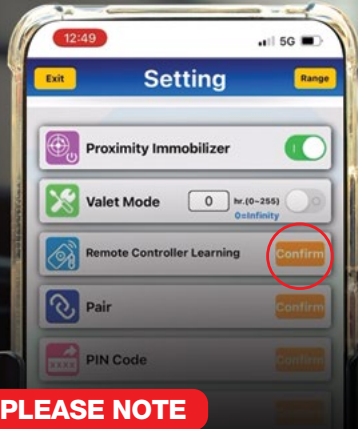

PLEASE NOTE

- ✓ We recommend this Remote remain concealed in the vehicle and away from these instructions, should you choose to leave the instructions in the vehicle.

BTI SMART PHONE PAIRING CHECK LIST

- ✓ Download the Cyclops Paralyser BTI App from the Apple or Google Play Store.
- ✓ Ensure Bluetooth, Finger Scan, Passcode and or Face Recognition in your phone are all turned ON.
- ✓ Background Refresh in Phone settings must also be ON.

- ✓ The pairing code for the BTI to your phone is 123456, you will be asked to do this twice, once is to pair the Phone and then the App.



BTI SMART PHONE PAIRING CHECK LIST CONTINUED

- ✓ You'll need to change the pairing code to your New Connect Key Code. Store your PIN in a safe place for future use.
- ✓ Once the App, Phone and BTI are connected you can then change settings in the App, e.g. turn Proximity ON for auto disarm etc.

- ✓ 2 x Remotes are pre programmed to the BTI. One of these we suggest to keep hidden as an emergency override and the other to drivers of the vehicle who don't have the App. Function of these remotes as per page 10 .





**SCAN HERE FOR
MORE DETAILS**

IMPORTANT NOTE

Your BTI requires Bluetooth connection at all times for reliable functionality, as with all Bluetooth Devices, sometimes there is Bluetooth Drop out. Should your BTI ever lose connection to your Smart Phone simply go to scan option on the BTI App and re scan for connection.

DYNAMCO

Automotive Aftermarket Specialists

+61 8 9221 2345 | dynamco.com.au